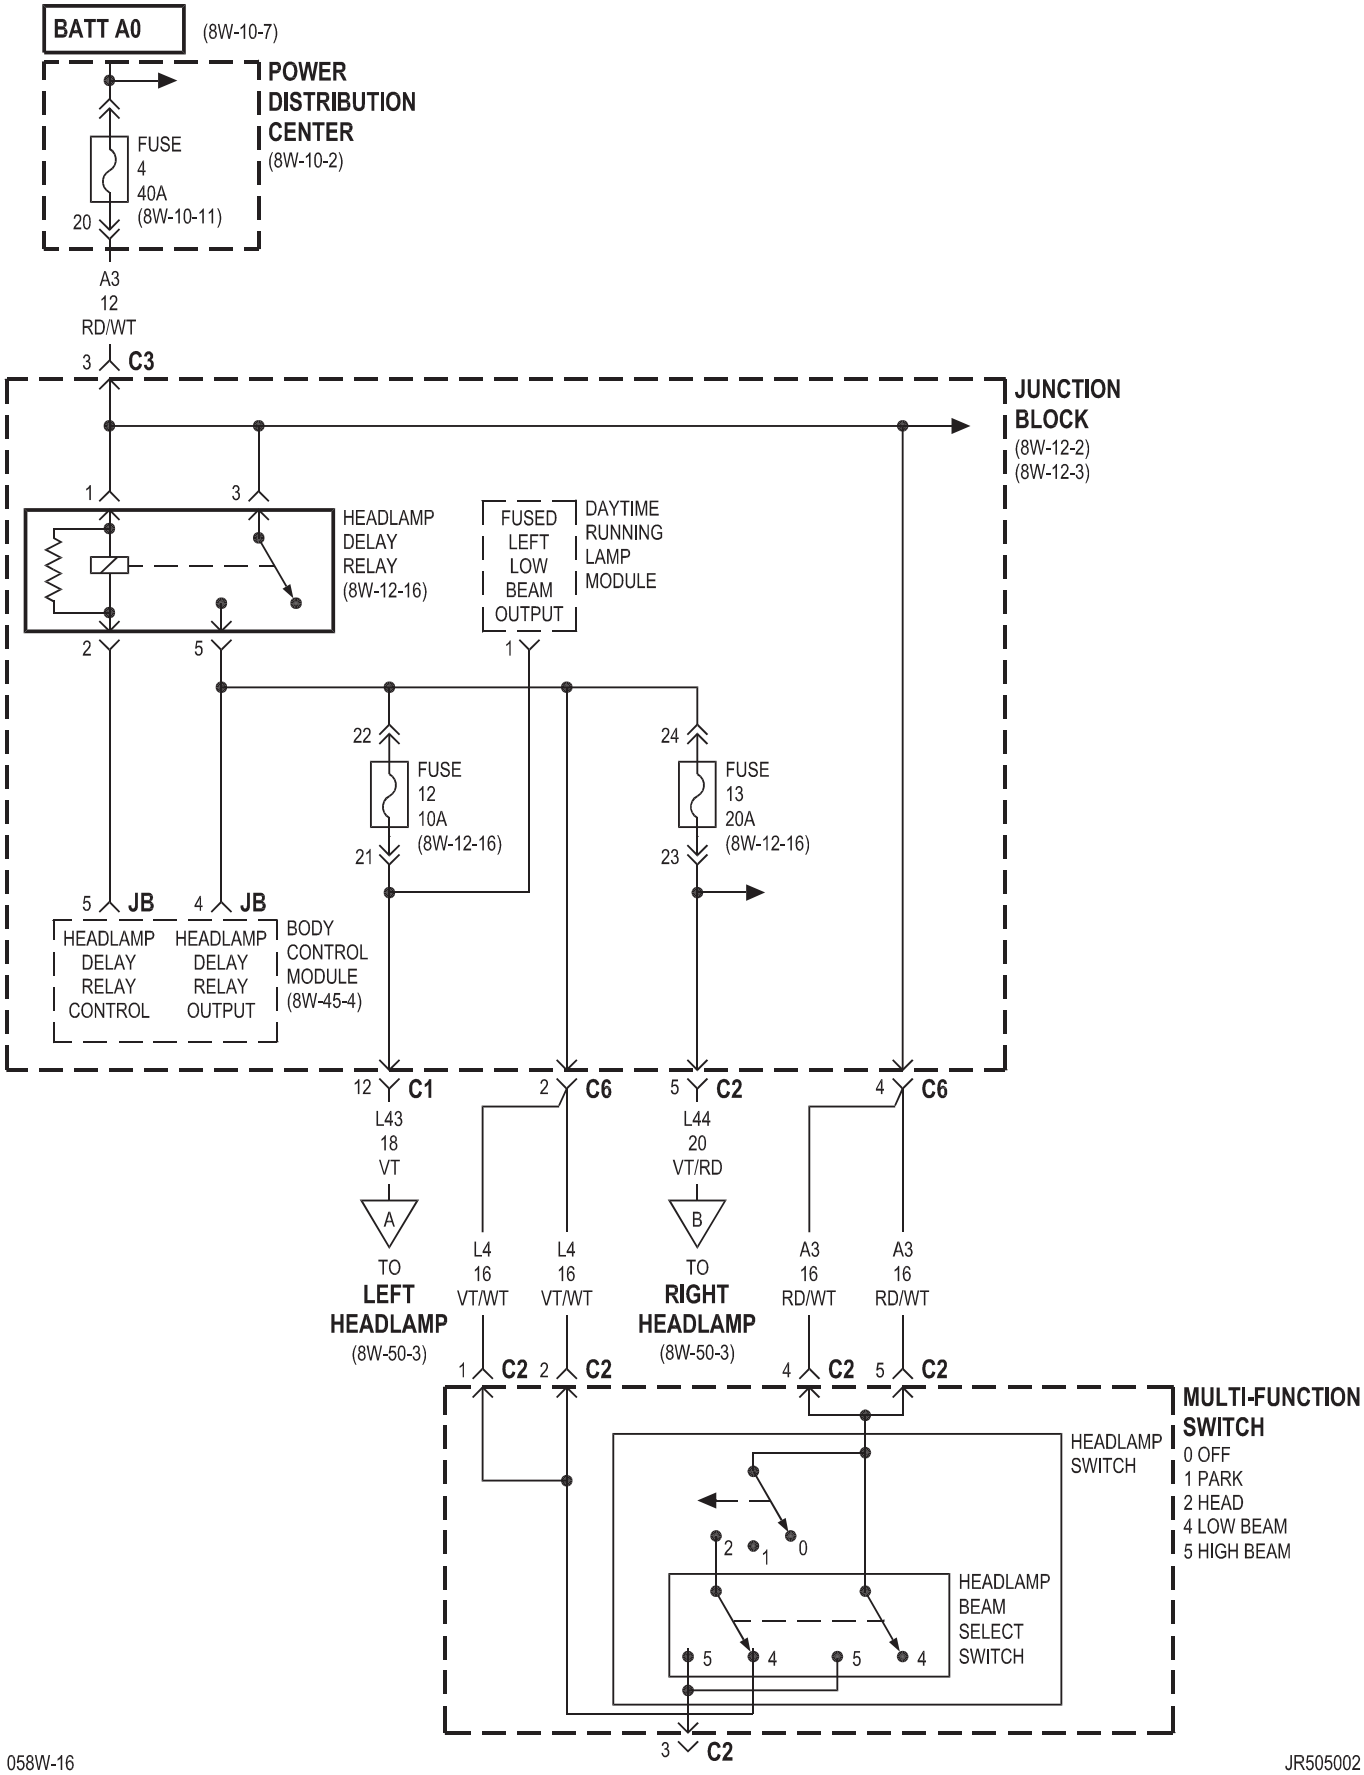
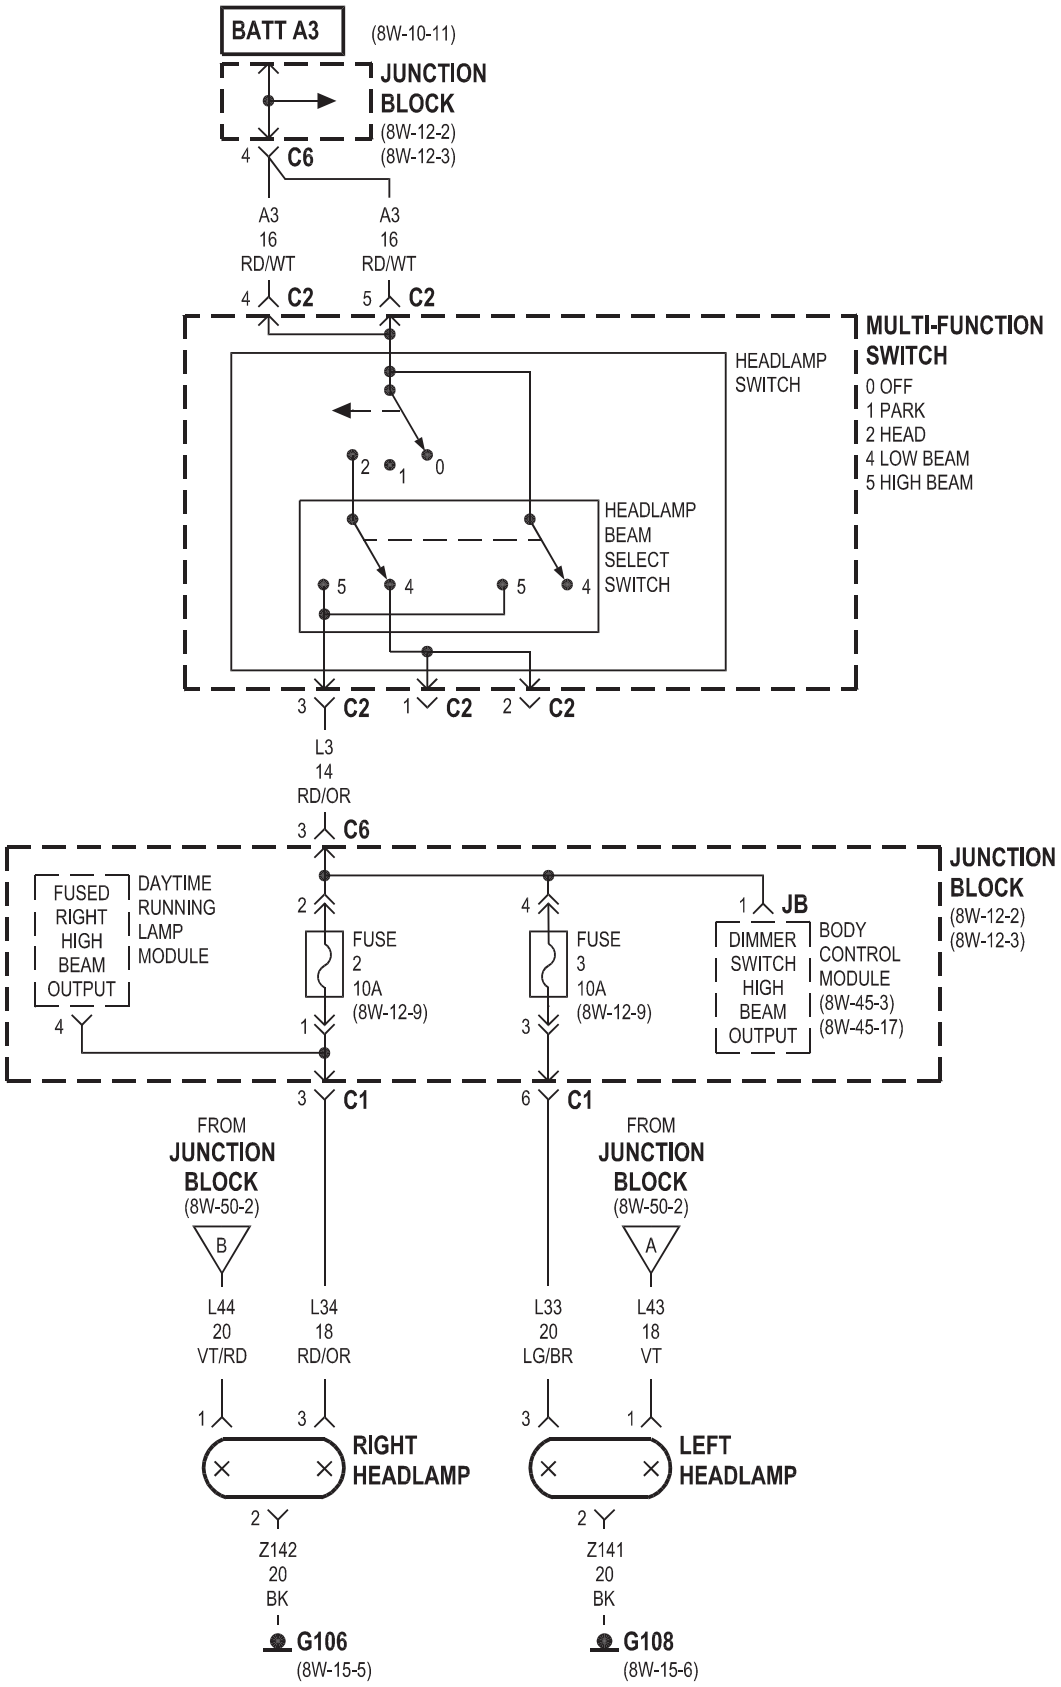
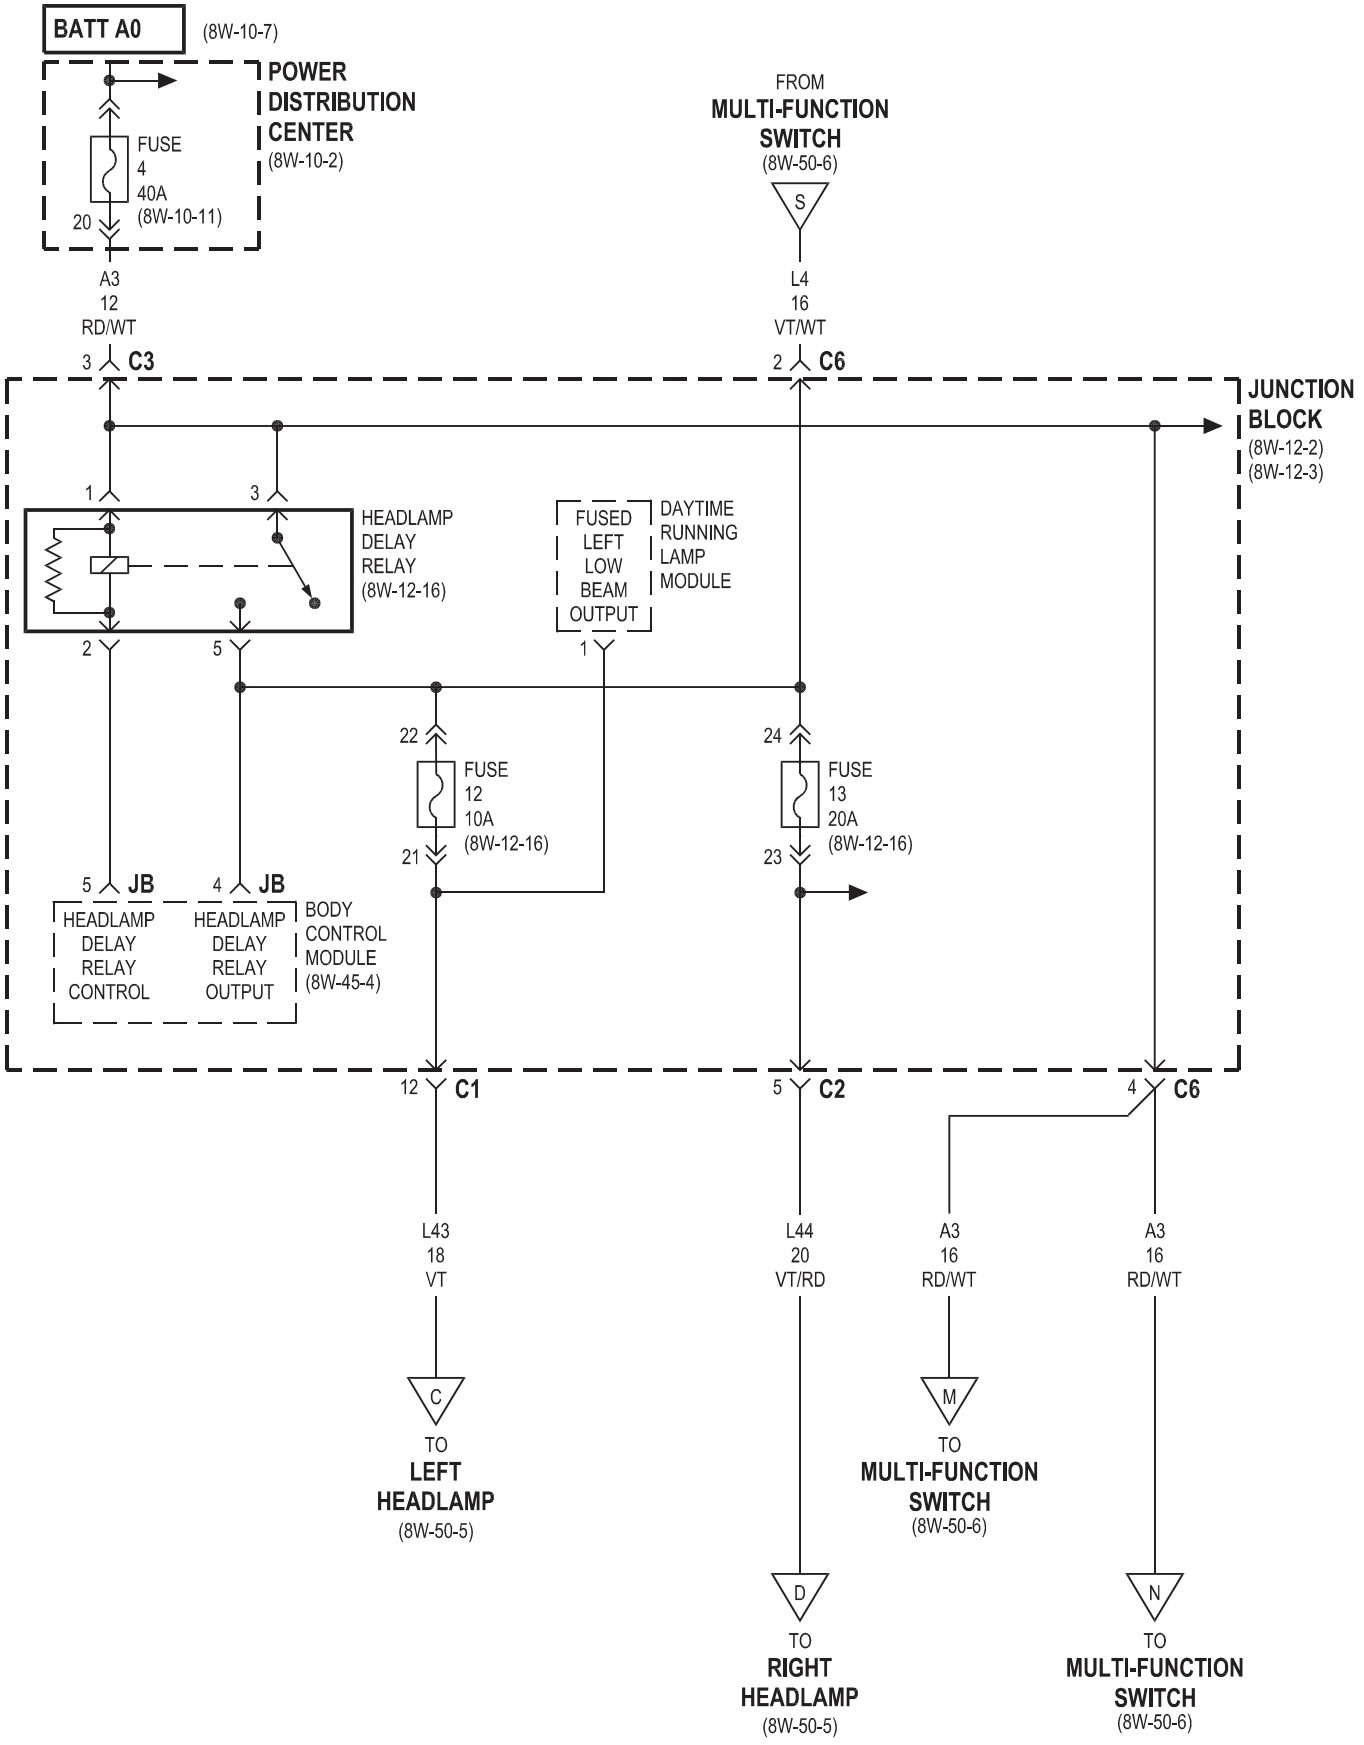
8W-50 FRONT LIGHTING

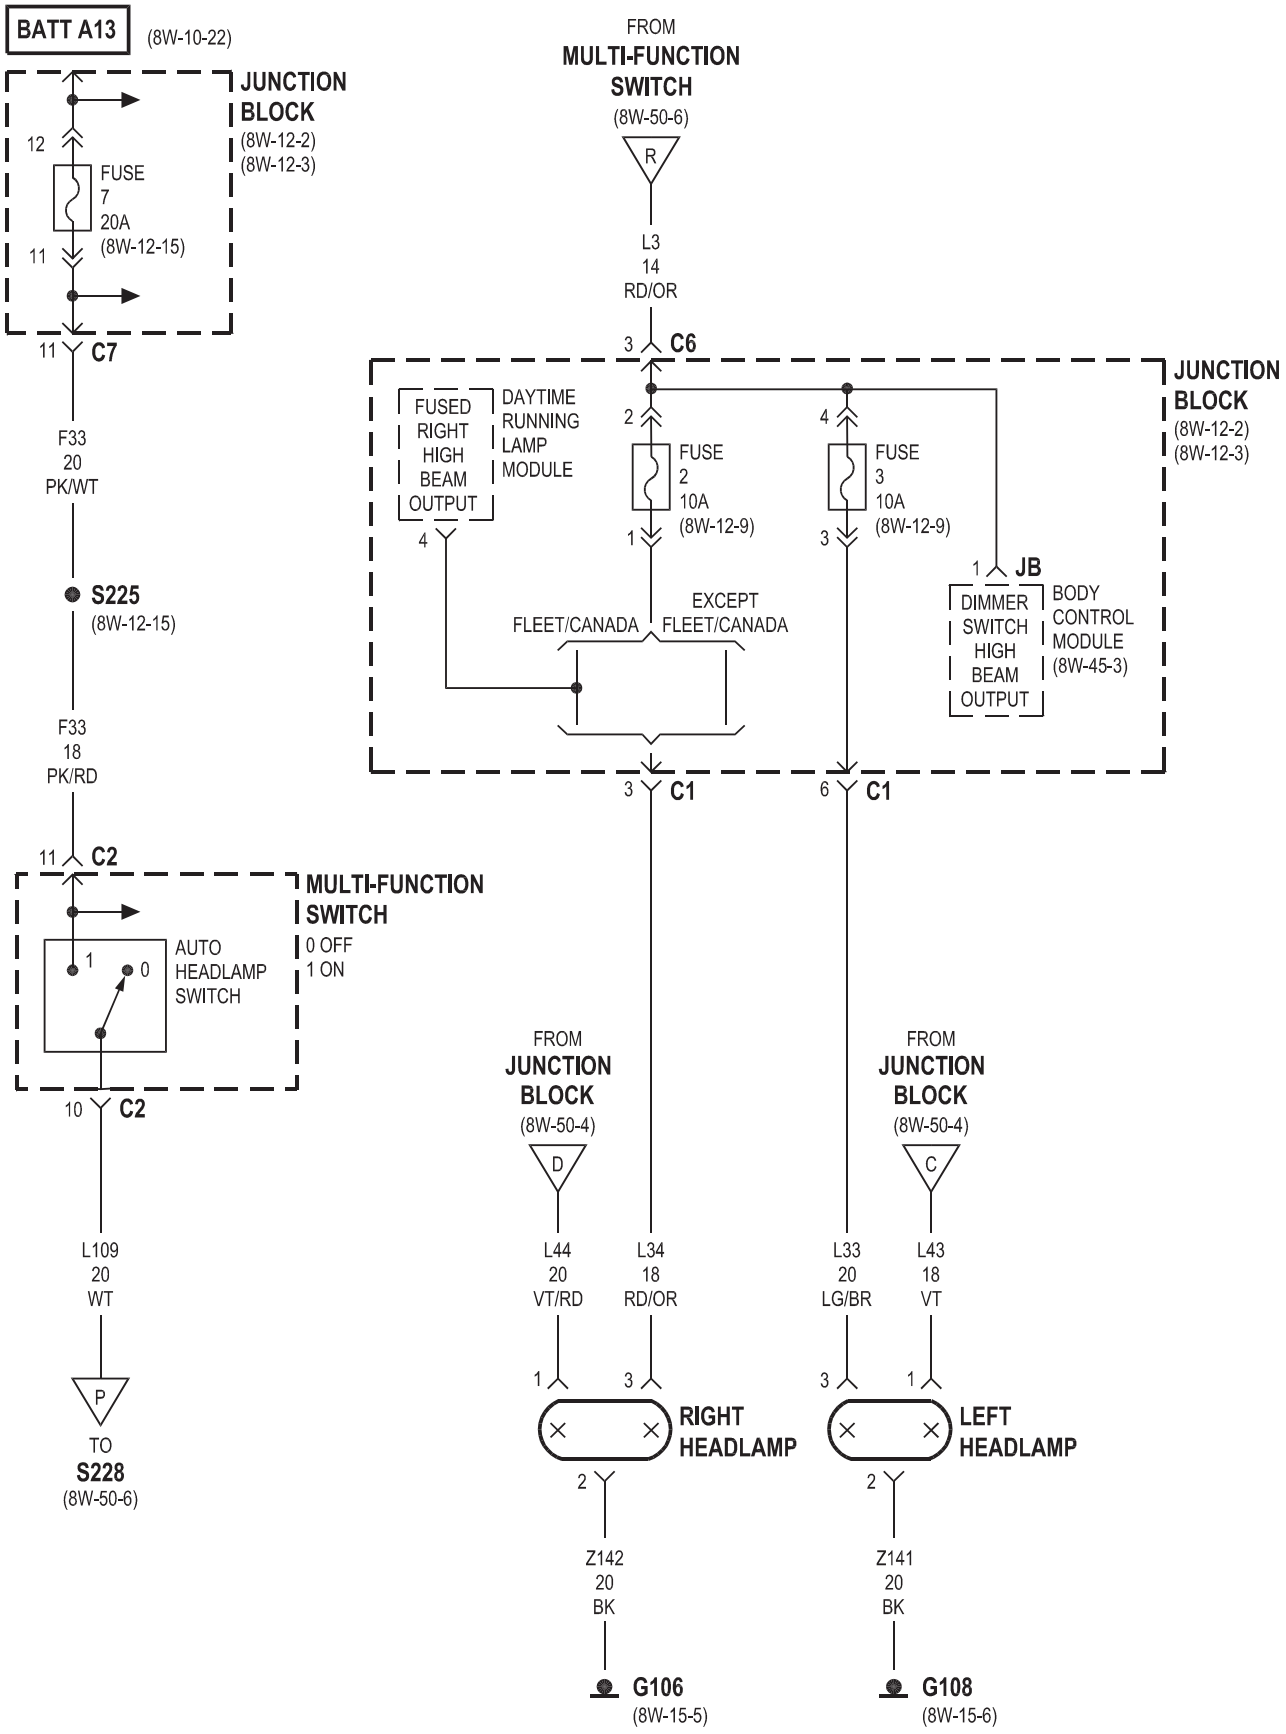
Component	Page
Auto Headlamp Relay	8W-50-6
Auto Headlamp Switch	8W-50-5
Body Control Module	8W-50-2, 3, 4, 5, 6, 8, 10, 12, 13, 14
Combination Flasher	8W-50-10
Daytime Running Lamp Module	8W-50-2, 3, 4, 5, 9, 11
Fog Lamp Relay	8W-50-10
Front Fog Lamp Switch	8W-50-10
Fuse 2	8W-50-3, 5, 14
Fuse 3	8W-50-3, 5, 14
Fuse 4	8W-50-2, 4, 11, 13
Fuse 7	8W-50-5, 7, 8, 10
Fuse 10	8W-50-9, 11, 16
Fuse 12	8W-50-2, 4, 13
Fuse 13	8W-50-2, 4, 9, 13
Fuse 16	8W-50-7
Fuse 20	8W-50-10
G106	8W-50-3, 5, 7, 8, 9, 10, 15, 16
G108	8W-50-3, 5, 7, 8, 9, 10, 15, 16
G301	8W-50-11, 12
Headlamp Beam Select Switch	8W-50-6
Headlamp Delay Relay	8W-50-2, 4, 9, 13
Headlamp Leveling Switch	8W-50-12
Headlamp Switch	8W-50-6
Instrument Cluster	8W-50-7, 9, 10, 16
Junction Block	8W-50-2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16
Left Fog Lamp	8W-50-9, 10, 16
Left Headlamp	8W-50-2, 3, 4, 5
Left Lavalier Module	8W-50-12, 13, 14, 15
Left Park/Turn Signal Lamp	8W-50-7, 8
Multi-Function Switch	8W-50-2, 3, 4, 5, 6, 7, 8, 9, 10, 12, 13, 14, 16
Park Brake Switch	8W-50-11
Park Lamp Relay	8W-50-8
Power Distribution Center	8W-50-2, 4, 7, 10, 13
Right Fog Lamp	8W-50-9, 10, 16
Right Headlamp	8W-50-2, 3, 4, 5
Right Lavalier Module	8W-50-12, 13, 14, 15
Right Park/Turn Signal Lamp	8W-50-7, 8

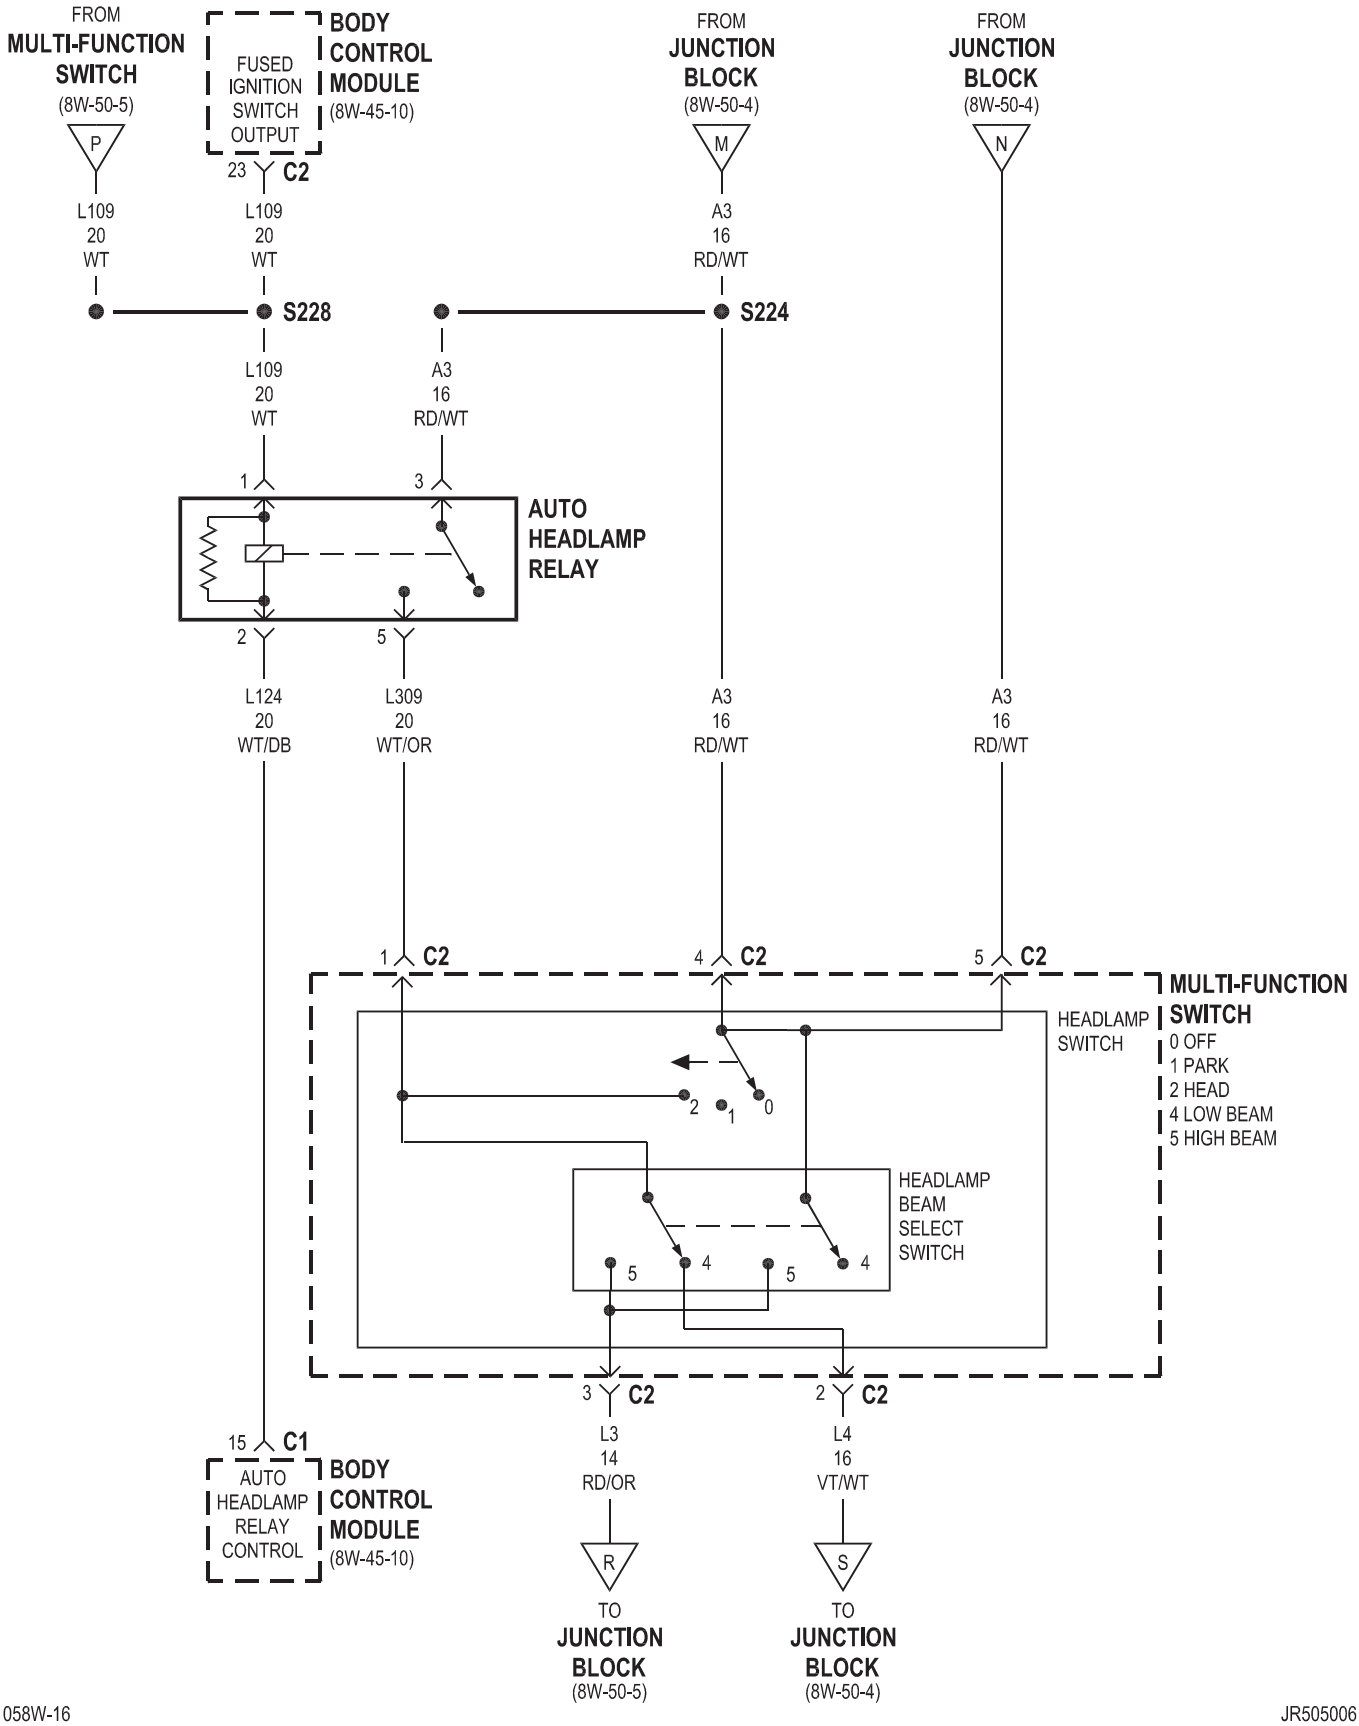

BATT A0
(8W-10-7)
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE 4 40A
(8W-10-11)
20
A3 12 RD/WT
3 C3
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
1
3
HEADLAMP DELAY RELAY
(8W-12-16)
2
5
FUSED LEFT LOW BEAM OUTPUT
DAYTIME RUNNING LAMP MODULE
1
22
FUSE 12 10A
(8W-12-16)
21
24
FUSE 13 20A
(8W-12-16)
23
5 JB
4 JB
HEADLAMP DELAY RELAY CONTROL
HEADLAMP DELAY RELAY OUTPUT
BODY CONTROL MODULE
(8W-45-4)
12 C1
L43 18 VT
A
TO LEFT HEADLAMP
(8W-50-3)
2 C6
L4 16 VT/WT
L4 16 VT/WT
5 C2
L44 20 VT/RD
B
TO RIGHT HEADLAMP
(8W-50-3)
4 C6
A3 16 RD/WT
A3 16 RD/WT
1 C2
2 C2
4 C2
5 C2
MULTI-FUNCTION SWITCH
0 OFF
1 PARK
2 HEAD
4 LOW BEAM
5 HIGH BEAM
HEADLAMP SWITCH
2
1
0
HEADLAMP BEAM SELECT SWITCH
5
4
5
4
3 C2

BASE

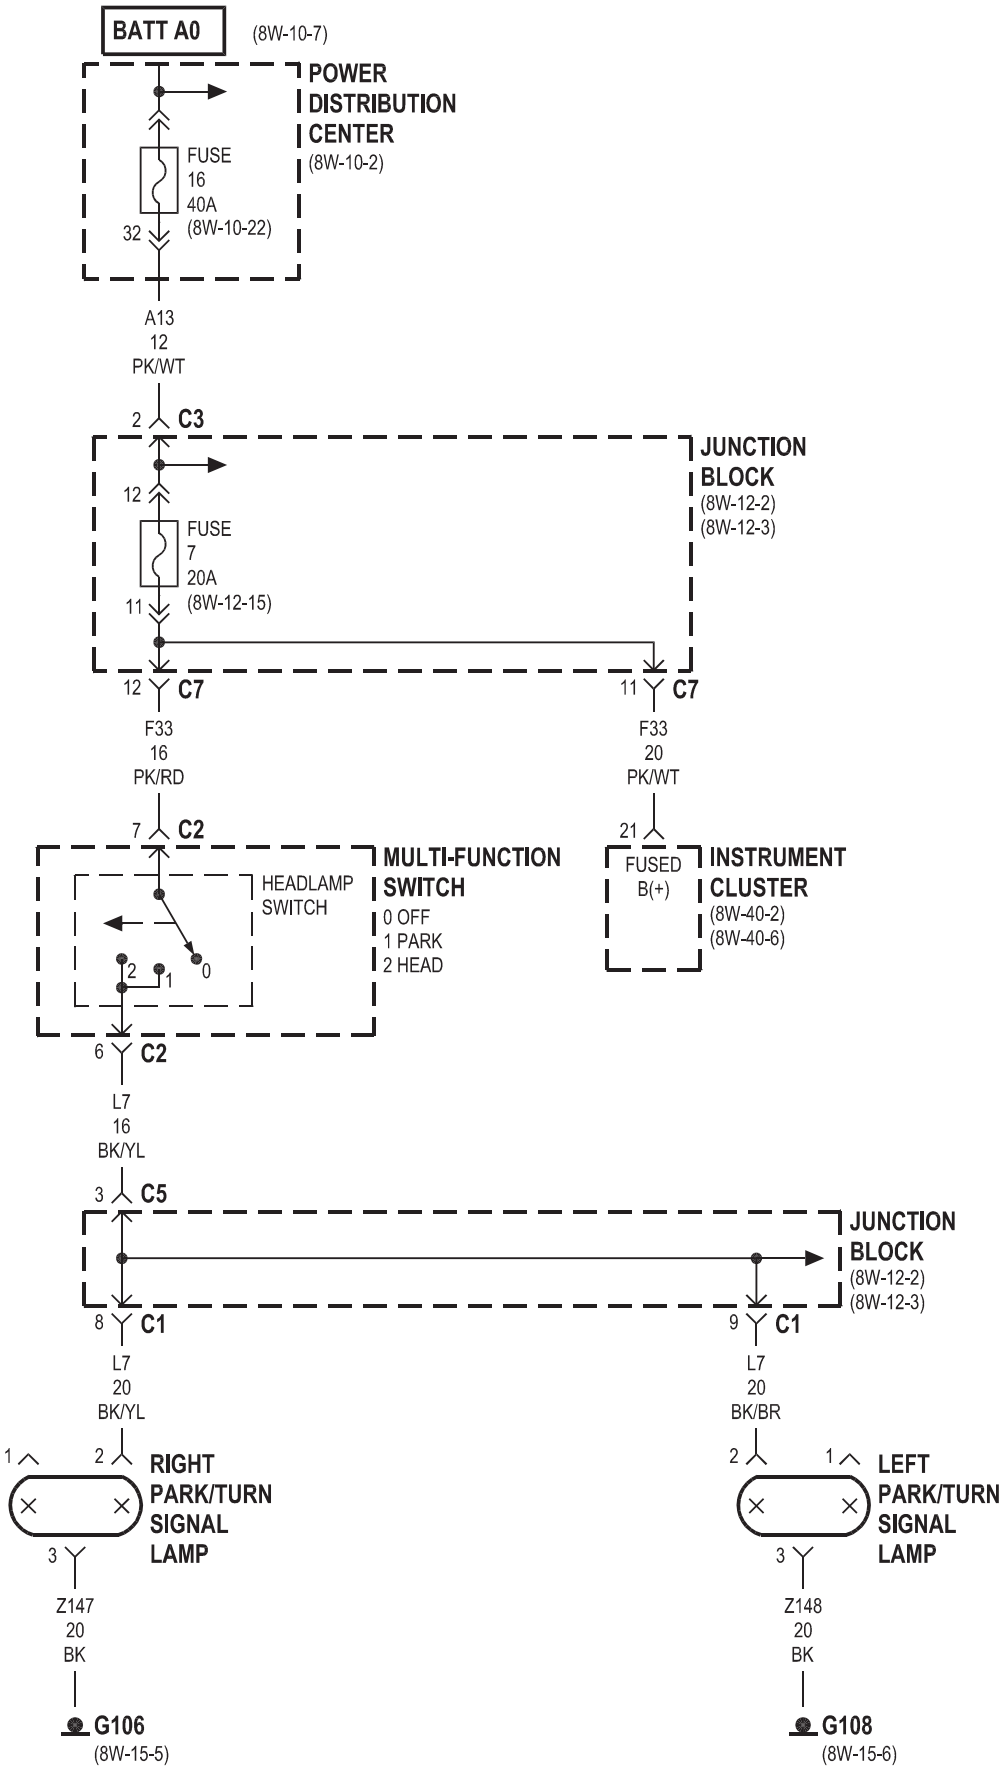

BATT A3
(8W-10-11)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
4 C6
A3 16 RD/WT
A3 16 RD/WT
4 C2
5 C2
MULTI-FUNCTION SWITCH
0 OFF
1 PARK
2 HEAD
4 LOW BEAM
5 HIGH BEAM
HEADLAMP SWITCH
HEADLAMP BEAM SELECT SWITCH
3 C2
1 C2
2 C2
L3 14 RD/OR
3 C6
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
FUSED RIGHT HIGH BEAM OUTPUT
DAYTIME RUNNING LAMP MODULE
FUSE 2 10A (8W-12-9)
FUSE 3 10A (8W-12-9)
1 JB
DIMMER SWITCH HIGH BEAM OUTPUT
BODY CONTROL MODULE
(8W-45-3)
(8W-45-17)
3 C1
6 C1
FROM JUNCTION BLOCK (8W-50-2)
B
A
L44 20 VT/RD
L34 18 RD/OR
L33 20 LG/BR
L43 18 VT
RIGHT HEADLAMP
LEFT HEADLAMP
Z142 20 BK
Z141 20 BK
G106
(8W-15-5)
G108
(8W-15-6)

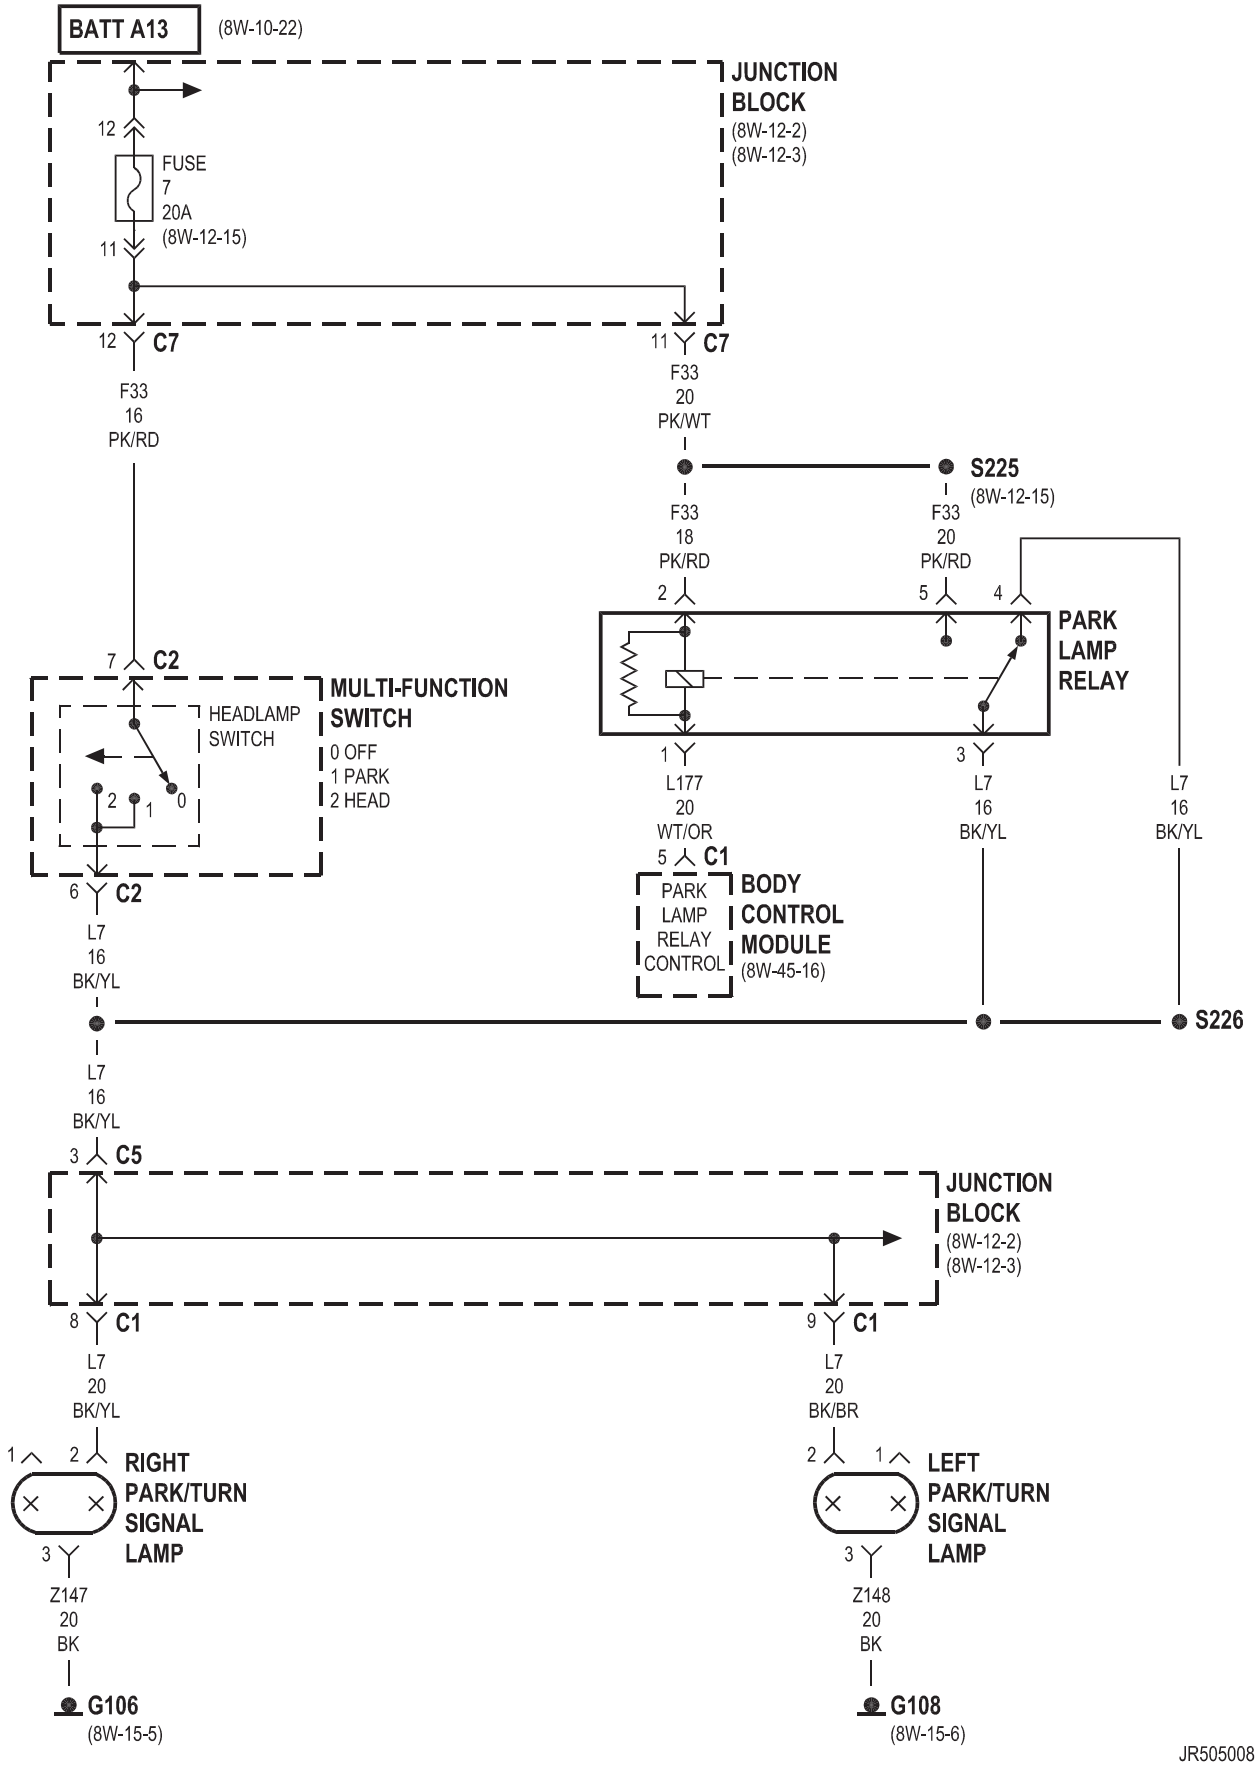

BATT A0
(8W-10-7)
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE 4 40A
(8W-10-11)
20
A3 12 RD/WT
3 C3
FROM MULTI-FUNCTION SWITCH
(8W-50-6)
S
L4 16 VT/WT
2 C6
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
1
3
HEADLAMP DELAY RELAY
(8W-12-16)
2
5
FUSED LEFT LOW BEAM OUTPUT
DAYTIME RUNNING LAMP MODULE
1
22
FUSE 12 10A
(8W-12-16)
21
24
FUSE 13 20A
(8W-12-16)
23
5 JB
4 JB
HEADLAMP DELAY RELAY CONTROL
HEADLAMP DELAY RELAY OUTPUT
BODY CONTROL MODULE
(8W-45-4)
12 C1
5 C2
4 C6
L43 18 VT
L44 20 VT/RD
A3 16 RD/WT
A3 16 RD/WT
C
TO LEFT HEADLAMP
(8W-50-5)
M
TO MULTI-FUNCTION SWITCH
(8W-50-6)
D
TO RIGHT HEADLAMP
(8W-50-5)
N
TO MULTI-FUNCTION SWITCH
(8W-50-6)


BATT A13
(8W-10-22)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
12
FUSE 7 20A
(8W-12-15)
11
11 C7
F33 20 PK/WT
S225
(8W-12-15)
F33 18 PK/RD
11 C2
MULTI-FUNCTION SWITCH
0 OFF
1 ON
AUTO HEADLAMP SWITCH
1
0
10 C2
L109 20 WT
P
TO S228
(8W-50-6)
FROM MULTI-FUNCTION SWITCH
(8W-50-6)
R
L3 14 RD/OR
3 C6
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
FUSED RIGHT HIGH BEAM OUTPUT
DAYTIME RUNNING LAMP MODULE
4
2
FUSE 2 10A
(8W-12-9)
1
4
FUSE 3 10A
(8W-12-9)
3
1 JB
DIMMER SWITCH HIGH BEAM OUTPUT
BODY CONTROL MODULE
(8W-45-3)
FLEET/CANADA
EXCEPT FLEET/CANADA
3 C1
6 C1
FROM JUNCTION BLOCK
(8W-50-4)
D
C
L44 20 VT/RD
L34 18 RD/OR
L33 20 LG/BR
L43 18 VT
1
3
3
1
RIGHT HEADLAMP
LEFT HEADLAMP
2
2
Z142 20 BK
Z141 20 BK
G106
(8W-15-5)
G108
(8W-15-6)

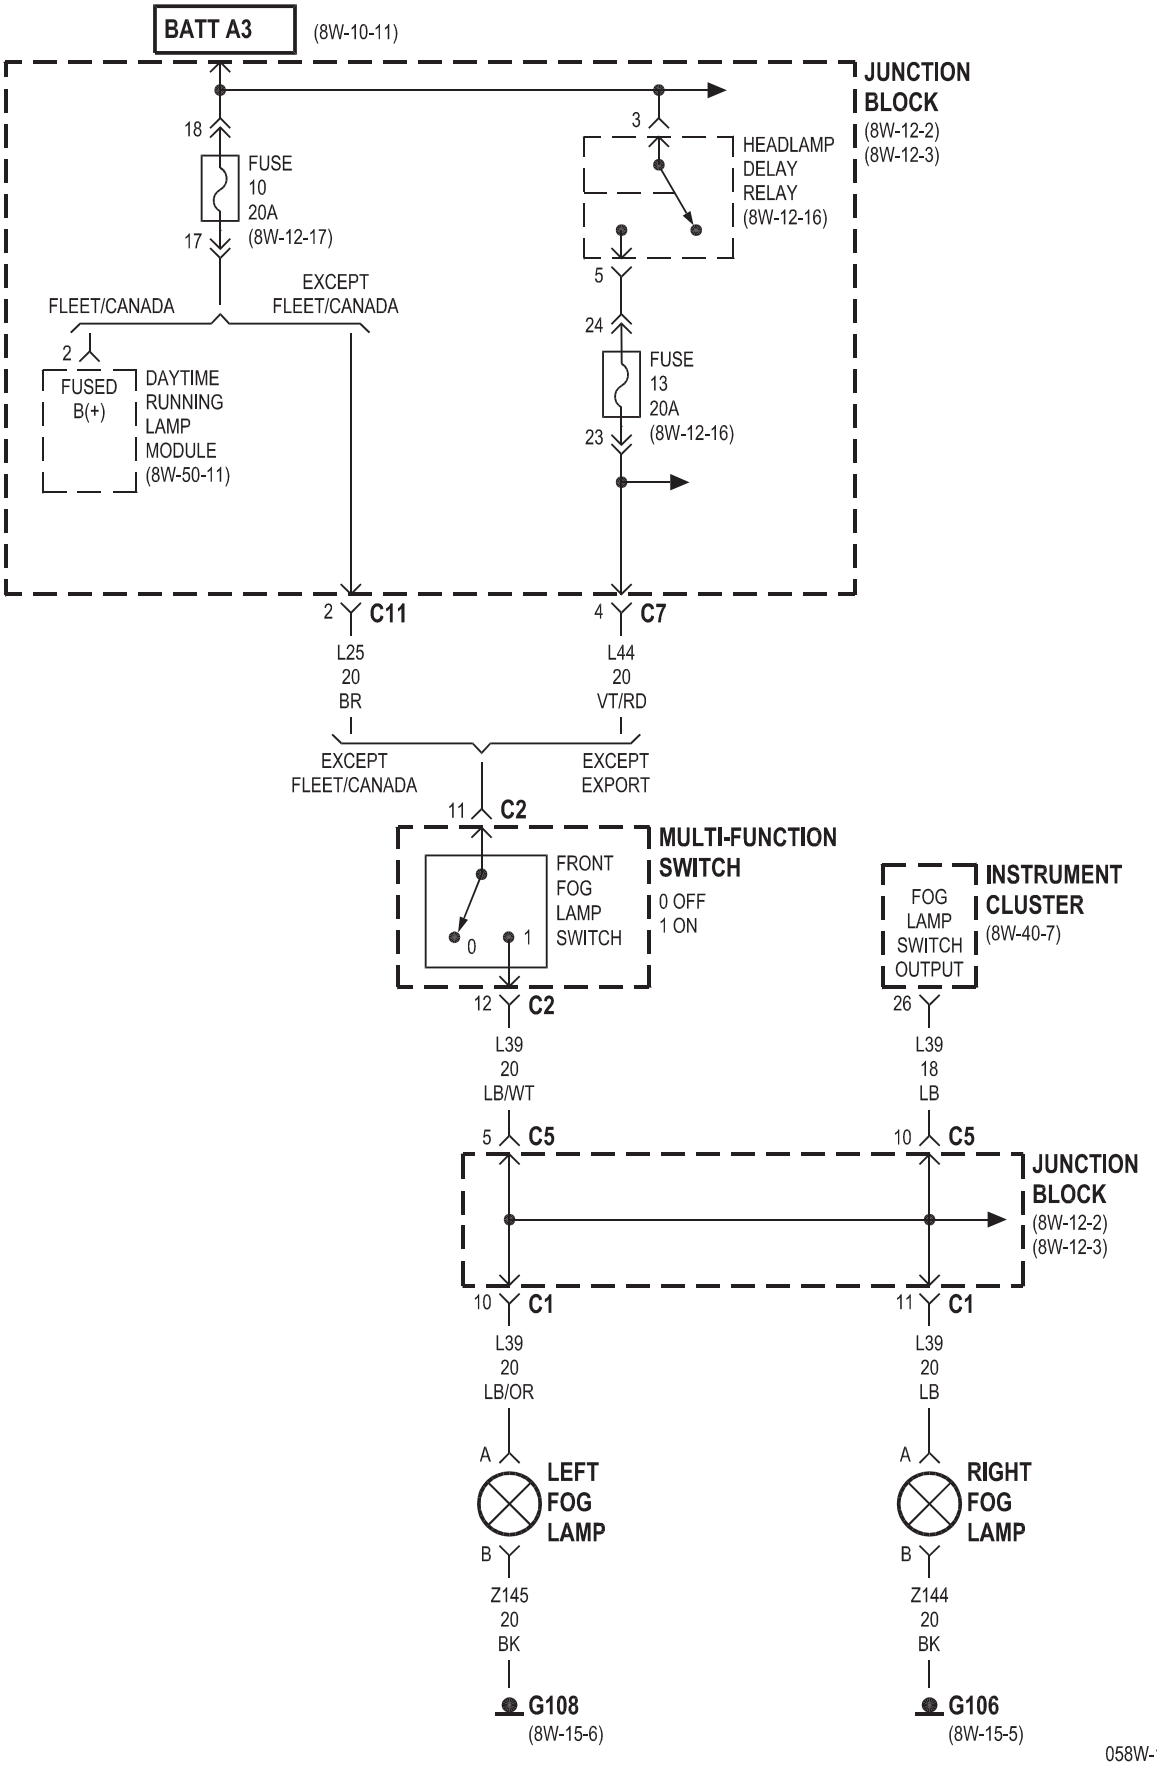

FROM
MULTI-FUNCTION
SWITCH
(8W-50-5)
P
L109
20
WT
FUSED
IGNITION
SWITCH
OUTPUT
BODY
CONTROL
MODULE
(8W-45-10)
23
C2
L109
20
WT
FROM
JUNCTION
BLOCK
(8W-50-4)
M
A3
16
RD/WT
FROM
JUNCTION
BLOCK
(8W-50-4)
N
S228
S224
L109
20
WT
A3
16
RD/WT
1
3
AUTO
HEADLAMP
RELAY
2
5
L124
20
WT/DB
L309
20
WT/OR
A3
16
RD/WT
A3
16
RD/WT
1
C2
4
C2
5
C2
MULTI-FUNCTION
SWITCH
0 OFF
1 PARK
2 HEAD
4 LOW BEAM
5 HIGH BEAM
HEADLAMP
SWITCH
2
1
0
HEADLAMP
BEAM
SELECT
SWITCH
5
4
5
4
3
C2
2
C2
15
C1
AUTO
HEADLAMP
RELAY
CONTROL
BODY
CONTROL
MODULE
(8W-45-10)
L3
14
RD/OR
L4
16
VT/WT
R
S
TO
JUNCTION
BLOCK
(8W-50-5)
TO
JUNCTION
BLOCK
(8W-50-4)

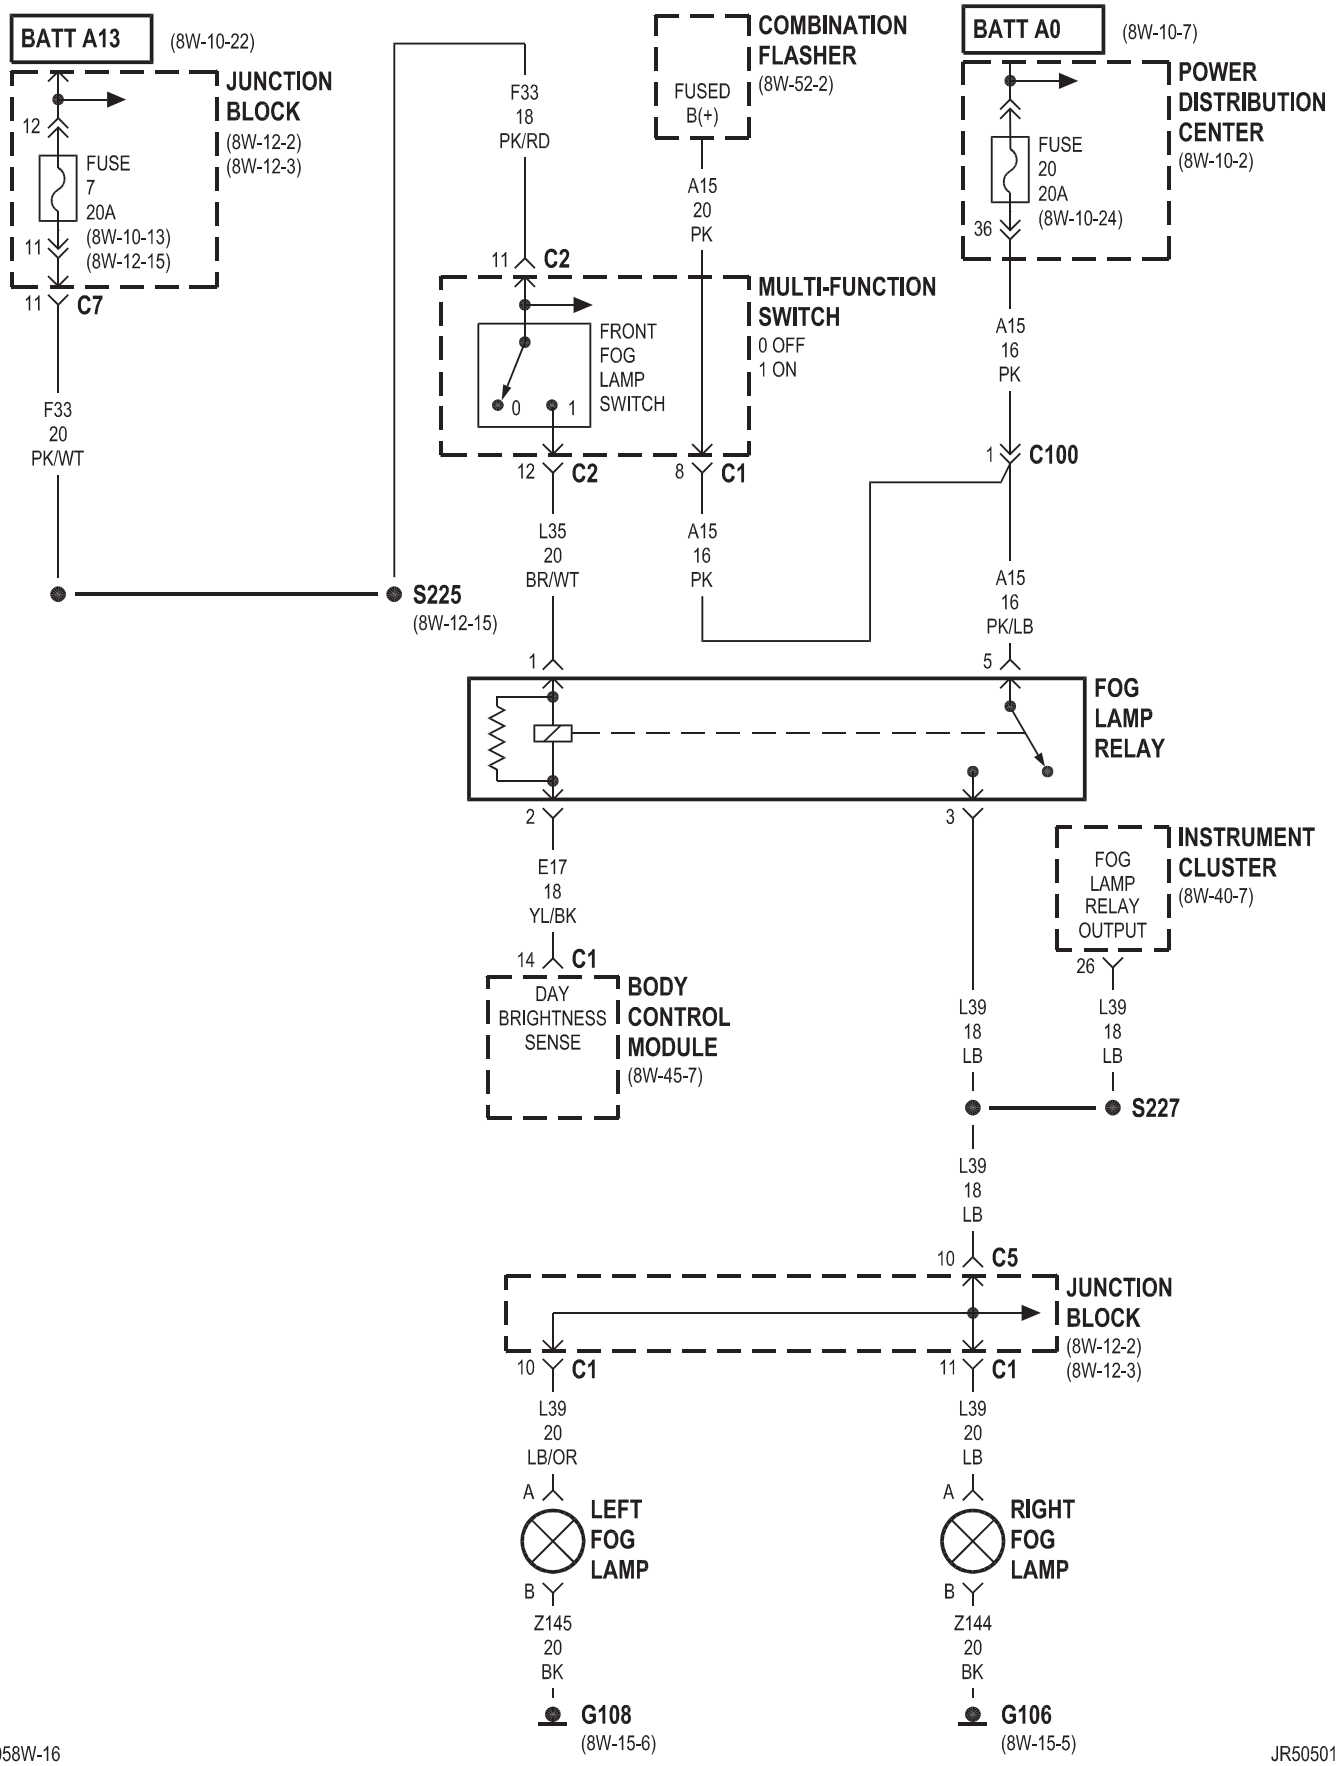
BASE

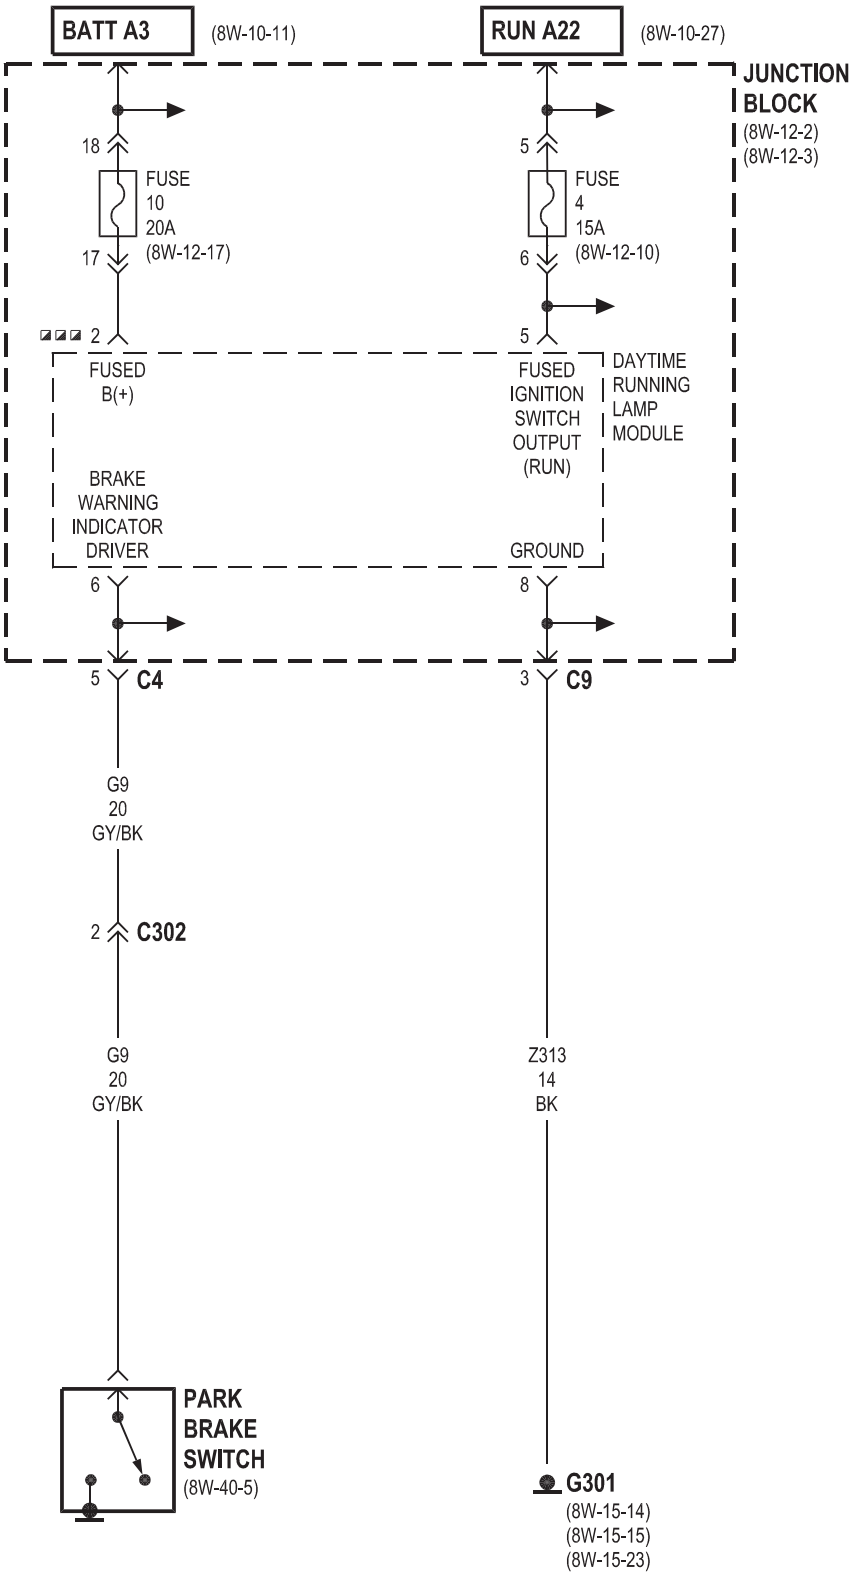

BATT A0
(8W-10-7)
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE 16 40A
(8W-10-22)
32
A13 12 PK/WT
2 C3
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
12
FUSE 7 20A
(8W-12-15)
11
12 C7
11 C7
F33 16 PK/RD
F33 20 PK/WT
7 C2
21
MULTI-FUNCTION SWITCH
HEADLAMP SWITCH
0 OFF
1 PARK
2 HEAD
FUSED B(+)
INSTRUMENT CLUSTER
(8W-40-2)
(8W-40-6)
6 C2
L7 16 BK/YL
3 C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
8 C1
9 C1
L7 20 BK/YL
L7 20 BK/BR
1
2
RIGHT PARK/TURN SIGNAL LAMP
LEFT PARK/TURN SIGNAL LAMP
3
Z147 20 BK
Z148 20 BK
G106
(8W-15-5)
G108
(8W-15-6)

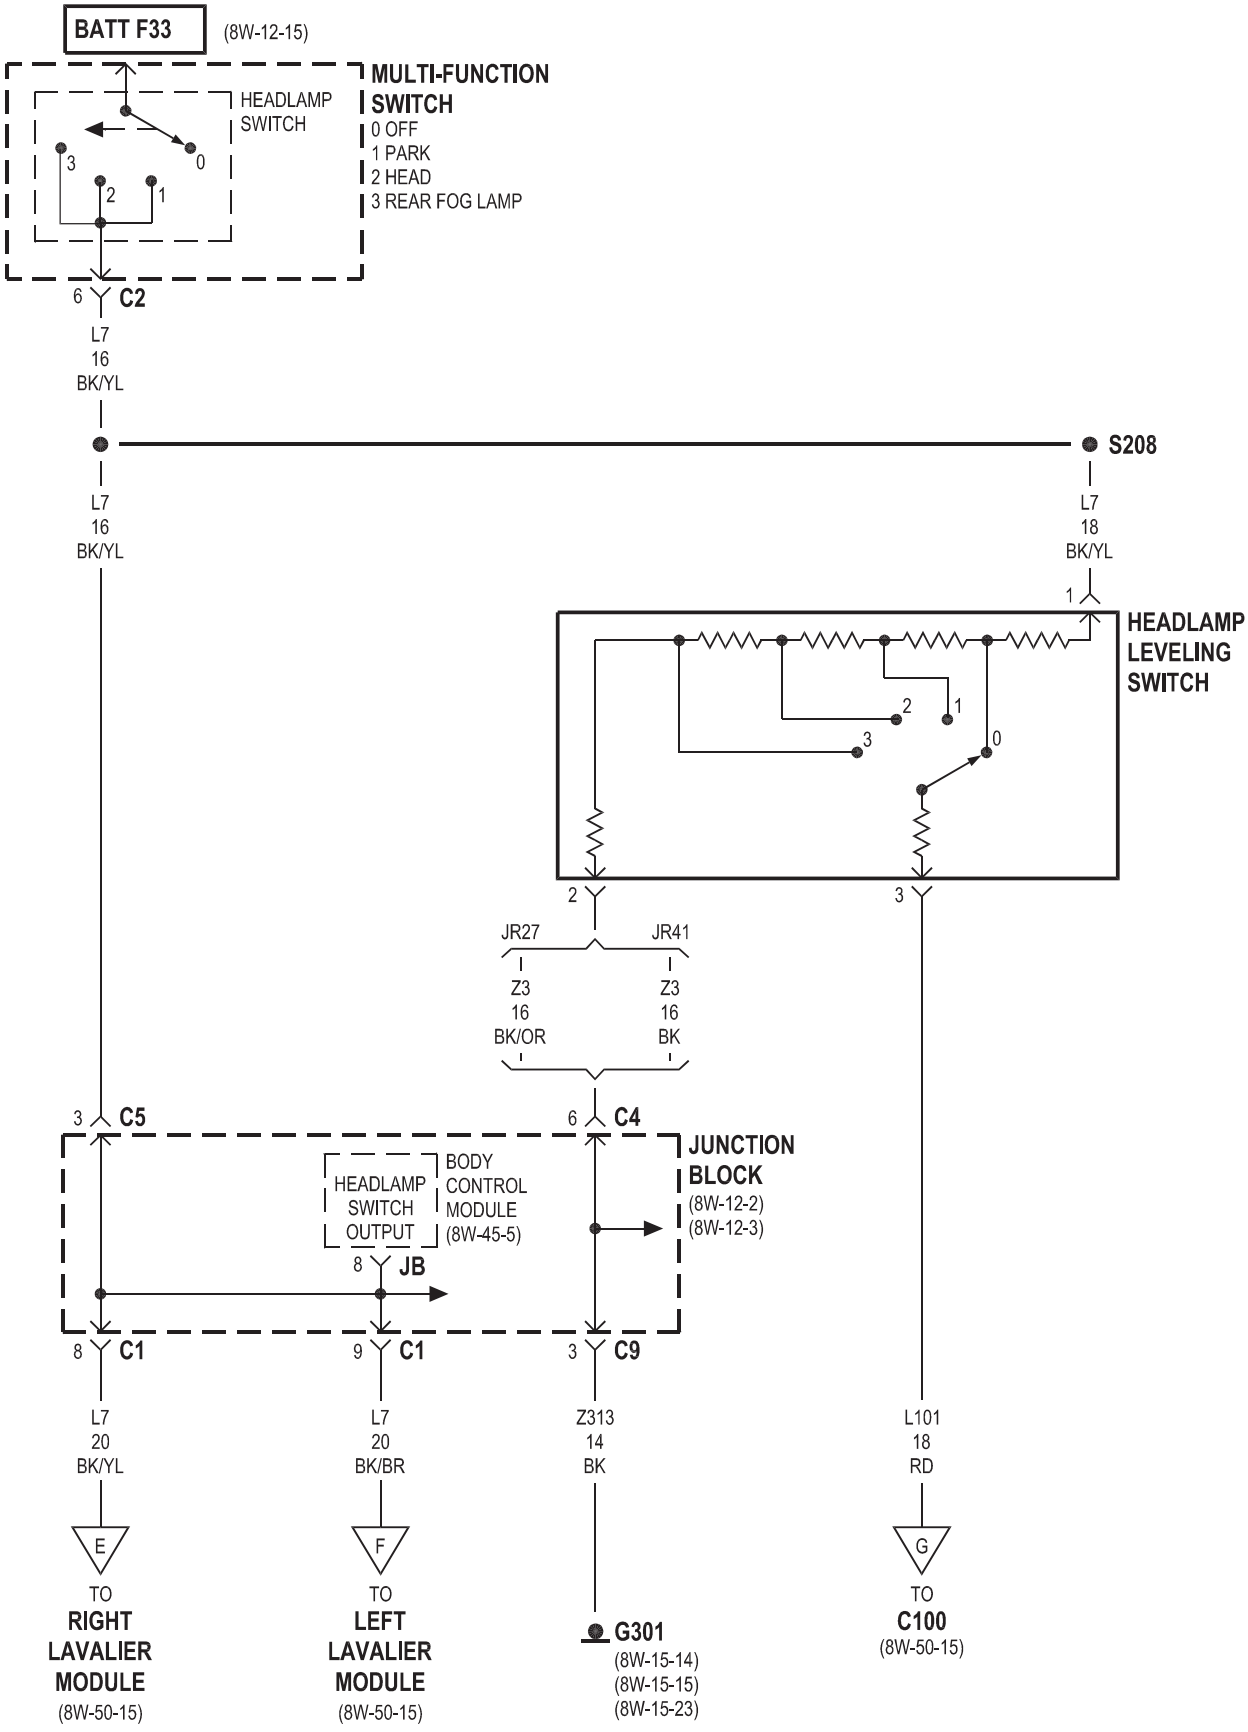

BATT A13
(8W-10-22)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
12
FUSE 7 20A
(8W-12-15)
11
12 C7
F33 16 PK/RD
11 C7
F33 20 PK/WT
S225
(8W-12-15)
F33 18 PK/RD
F33 20 PK/RD
2
5
4
PARK LAMP RELAY
7 C2
MULTI-FUNCTION SWITCH
HEADLAMP SWITCH
0 OFF
1 PARK
2 HEAD
2
1
0
6 C2
L7 16 BK/YL
1
3
L177 20 WT/OR
L7 16 BK/YL
L7 16 BK/YL
5 C1
PARK LAMP RELAY CONTROL
BODY CONTROL MODULE
(8W-45-16)
S226
L7 16 BK/YL
3 C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
8 C1
9 C1
L7 20 BK/YL
L7 20 BK/BR
1
2
RIGHT PARK/TURN SIGNAL LAMP
2
1
LEFT PARK/TURN SIGNAL LAMP
3
Z147 20 BK
Z148 20 BK
G106
(8W-15-5)
G108
(8W-15-6)

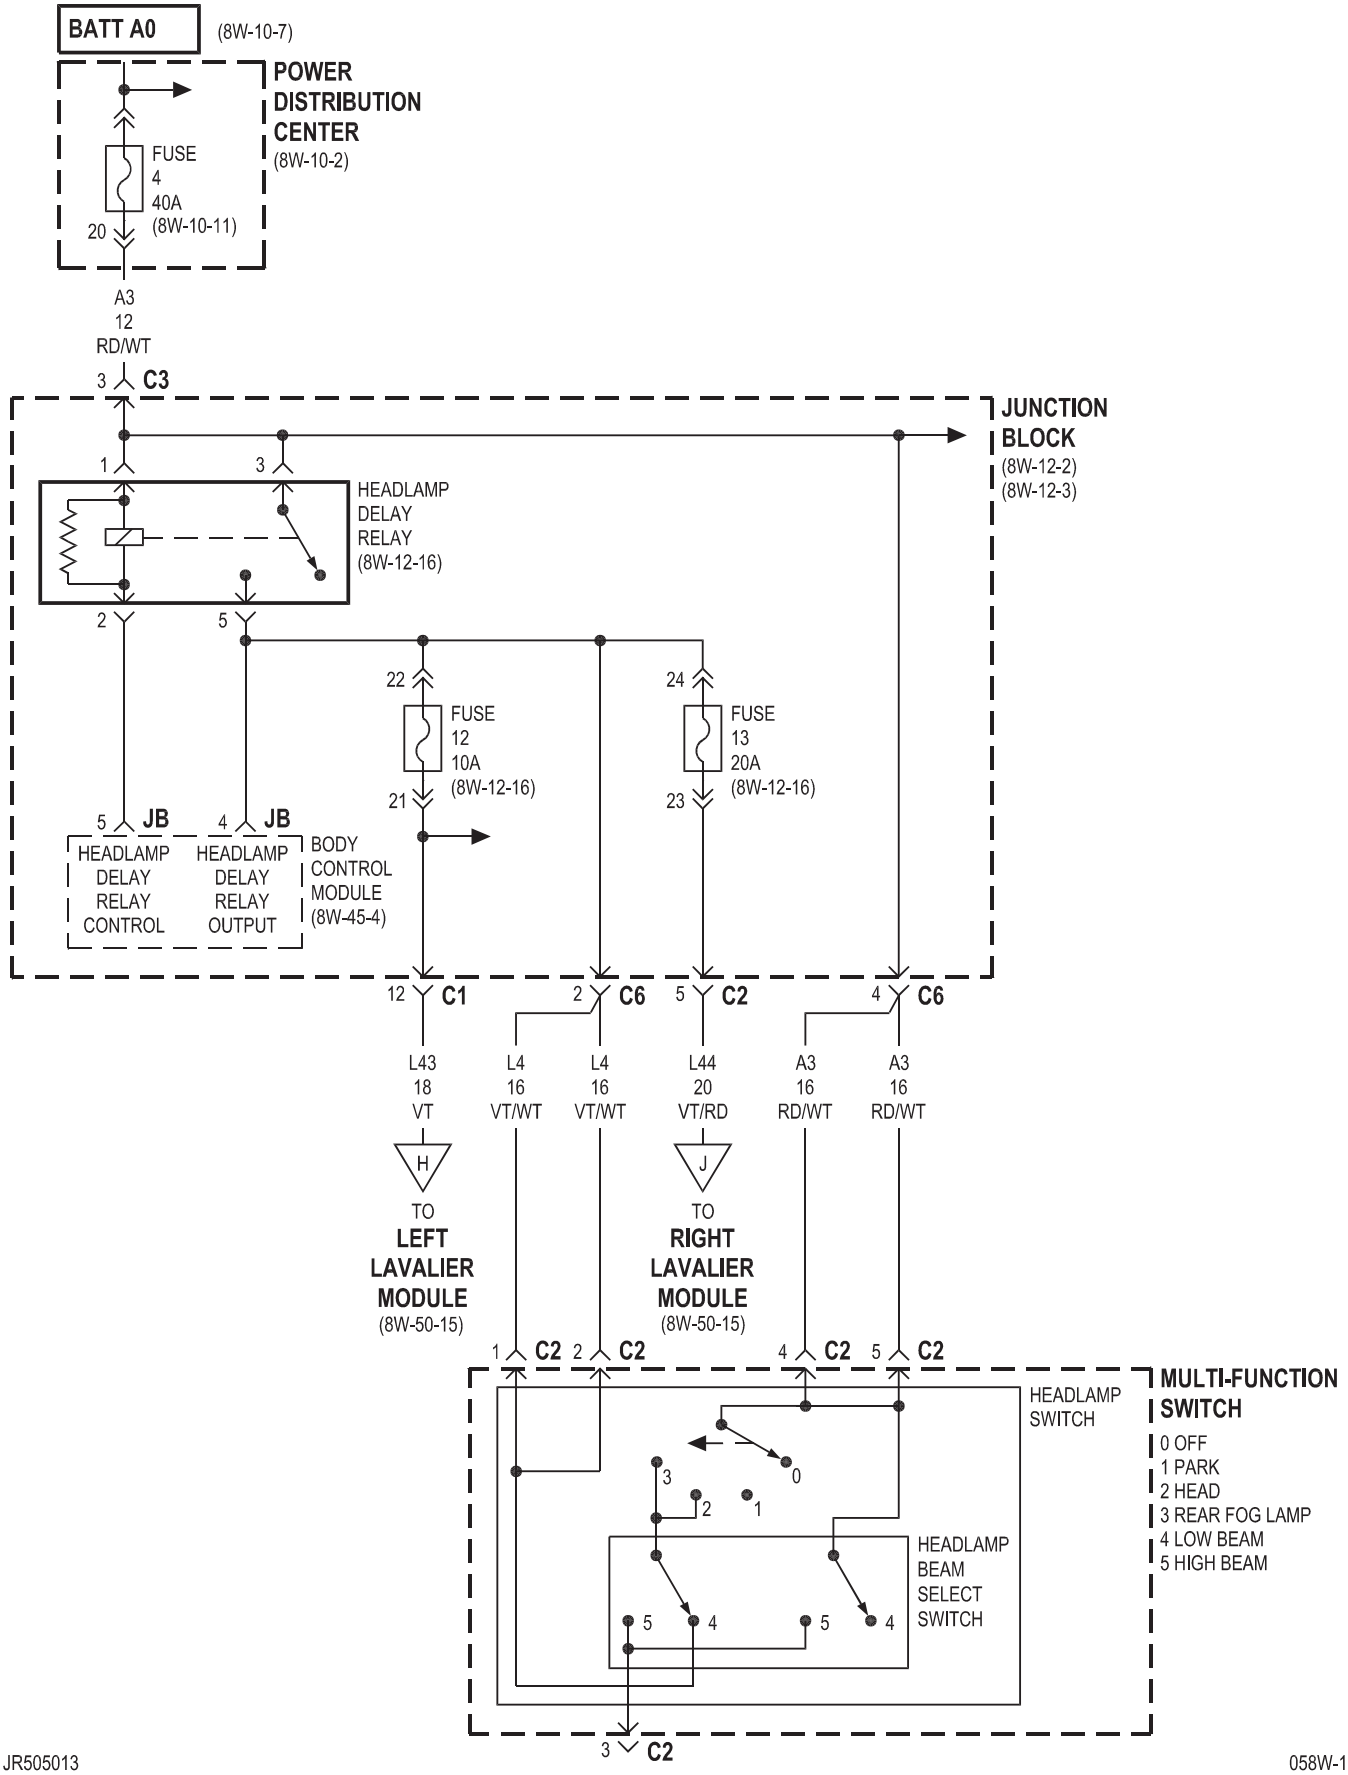
BASE

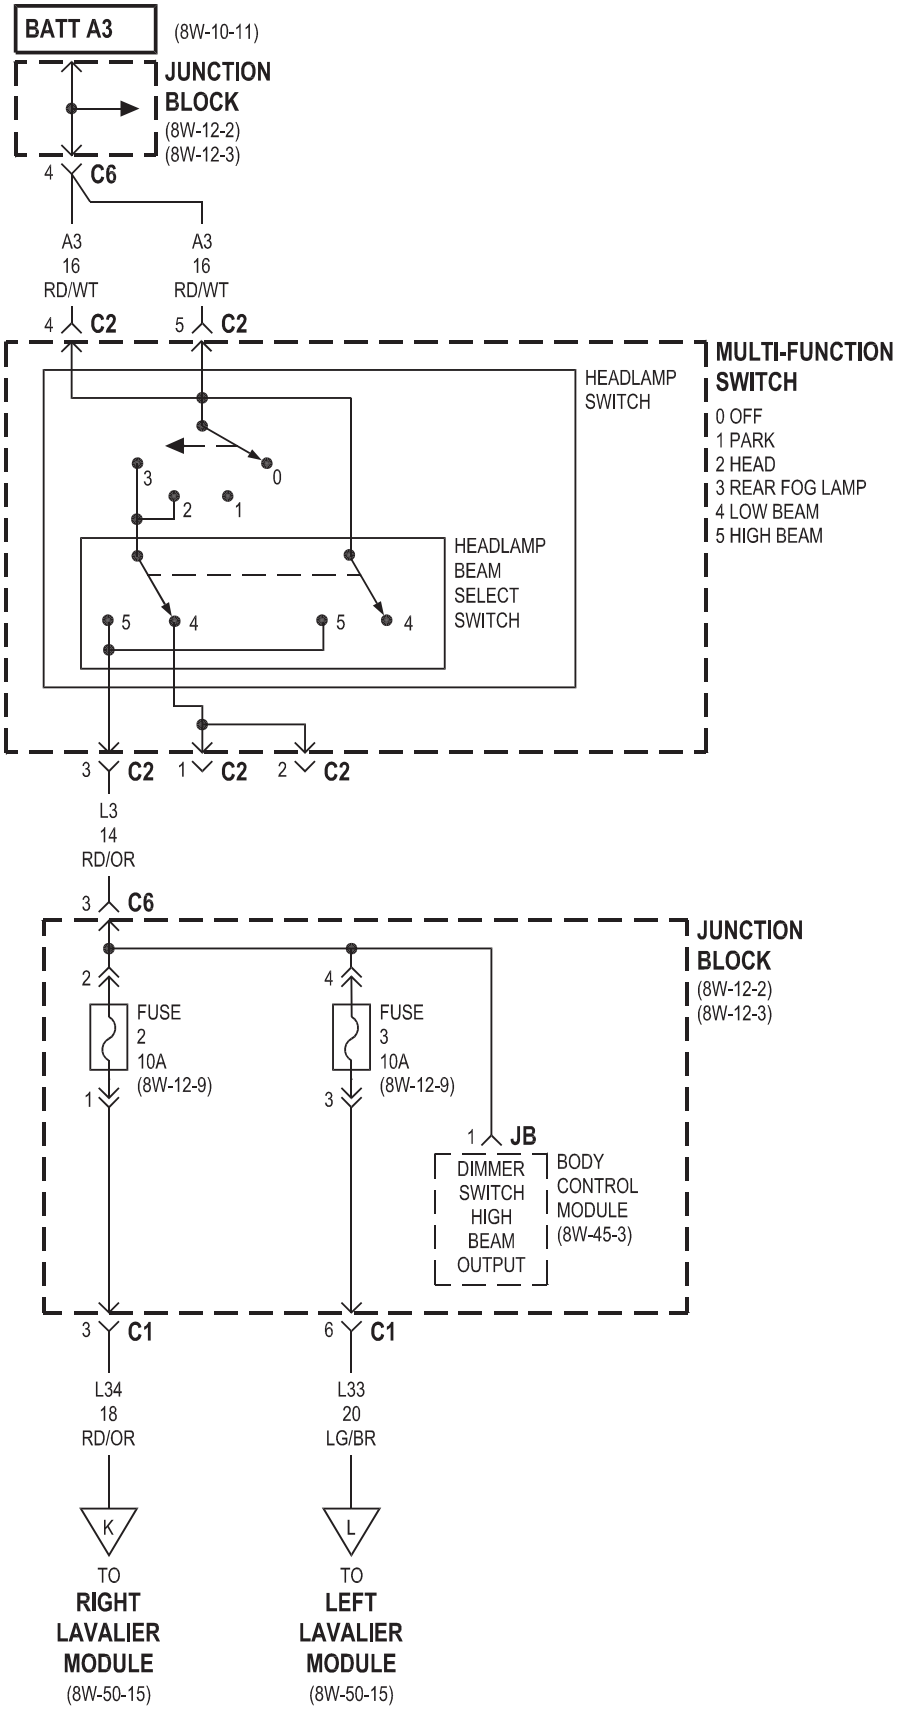

BATT A3
(8W-10-11)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
18
FUSE 10 20A
(8W-12-17)
17
3
HEADLAMP DELAY RELAY
(8W-12-16)
5
24
FUSE 13 20A
(8W-12-16)
23
FLEET/CANADA
EXCEPT FLEET/CANADA
2
FUSED B(+)
DAYTIME RUNNING LAMP MODULE
(8W-50-11)
2 C11
4 C7
L25 20 BR
L44 20 VT/RD
EXCEPT FLEET/CANADA
EXCEPT EXPORT
11 C2
MULTI-FUNCTION SWITCH
FRONT FOG LAMP SWITCH
0 OFF
1 ON
0
1
INSTRUMENT CLUSTER
(8W-40-7)
FOG LAMP SWITCH OUTPUT
12 C2
26
L39 20 LB/WT
L39 18 LB
5 C5
10 C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
10 C1
11 C1
L39 20 LB/OR
L39 20 LB
A
B
LEFT FOG LAMP
RIGHT FOG LAMP
Z145 20 BK
Z144 20 BK
G108
(8W-15-6)
G106
(8W-15-5)

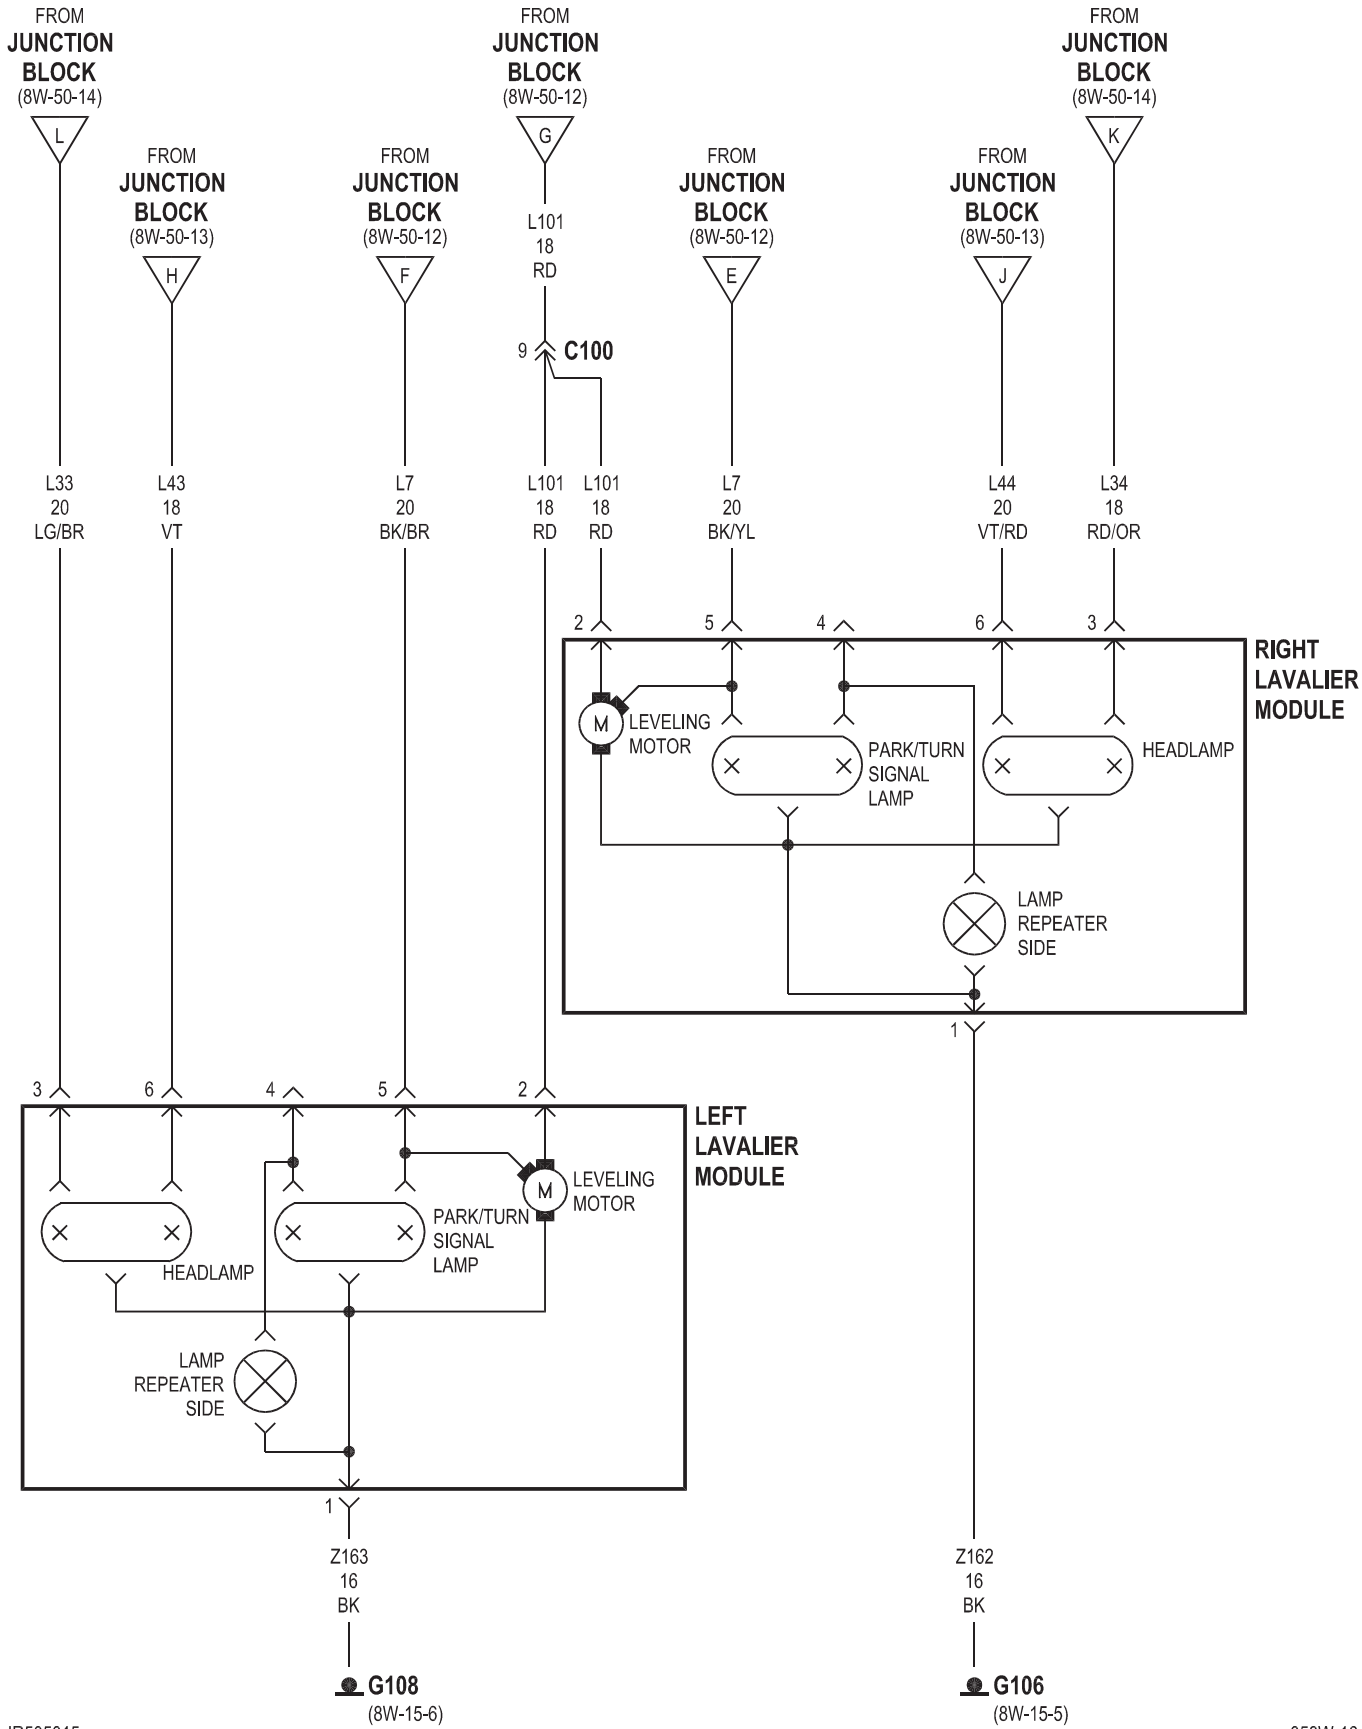

BATT A13
(8W-10-22)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
12
FUSE 7 20A
(8W-10-13)
(8W-12-15)
11
11 C7
F33 20 PK/WT
S225
(8W-12-15)
F33 18 PK/RD
11 C2
COMBINATION FLASHER
(8W-52-2)
FUSED B(+)
A15 20 PK
MULTI-FUNCTION SWITCH
0 OFF
1 ON
FRONT FOG LAMP SWITCH
0
1
12 C2
8 C1
L35 20 BR/WT
A15 16 PK
BATT A0
(8W-10-7)
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE 20 20A
(8W-10-24)
36
A15 16 PK
1 C100
A15 16 PK/LB
1
5
FOG LAMP RELAY
2
3
E17 18 YL/BK
14 C1
DAY BRIGHTNESS SENSE
BODY CONTROL MODULE
(8W-45-7)
INSTRUMENT CLUSTER
(8W-40-7)
FOG LAMP RELAY OUTPUT
26
L39 18 LB
L39 18 LB
S227
L39 18 LB
10 C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
10 C1
11 C1
L39 20 LB/OR
L39 20 LB
A
B
LEFT FOG LAMP
RIGHT FOG LAMP
Z145 20 BK
Z144 20 BK
G108
(8W-15-6)
G106
(8W-15-5)

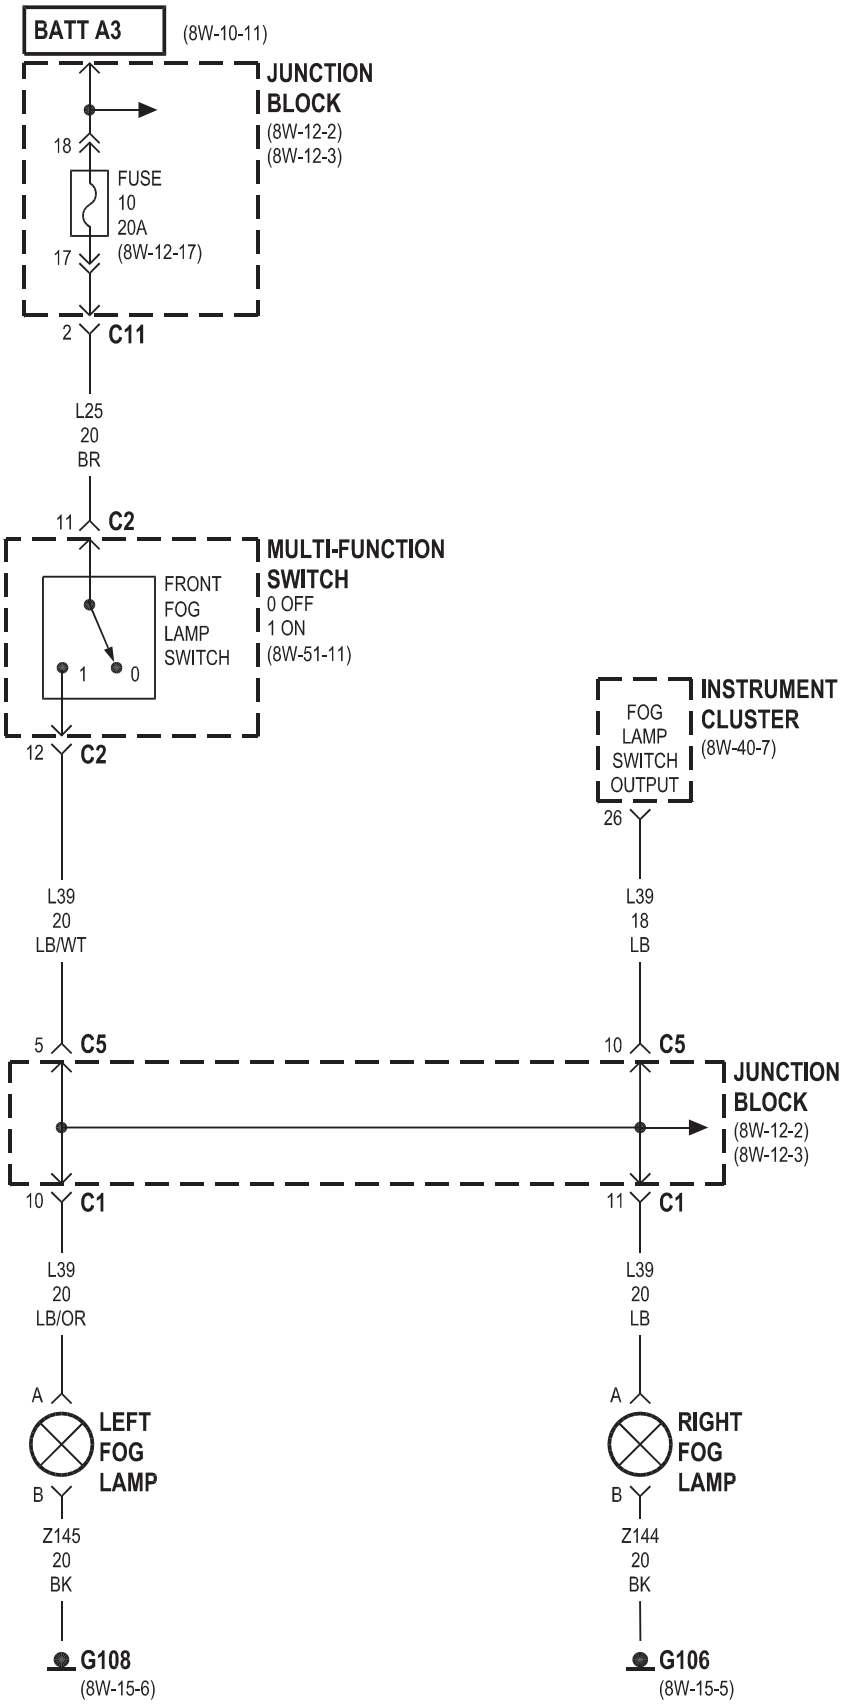

BATT A3
(8W-10-11)
RUN A22
(8W-10-27)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
18
FUSE 10 20A
(8W-12-17)
17
5
FUSE 4 15A
(8W-12-10)
6
2
FUSED B(+)
5
FUSED IGNITION SWITCH OUTPUT (RUN)
DAYTIME RUNNING LAMP MODULE
BRAKE WARNING INDICATOR DRIVER
GROUND
6
8
5 C4
3 C9
G9 20 GY/BK
2 C302
G9 20 GY/BK
Z313 14 BK
PARK BRAKE SWITCH
(8W-40-5)
G301
(8W-15-14)
(8W-15-15)
(8W-15-23)


BATT F33
(8W-12-15)
MULTI-FUNCTION SWITCH
HEADLAMP SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP
6 C2
L7 16 BK/YL
S208
L7 18 BK/YL
1
HEADLAMP LEVELING SWITCH
2
3
JR27
JR41
Z3 16 BK/OR
Z3 16 BK
3 C5
6 C4
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
HEADLAMP SWITCH OUTPUT
BODY CONTROL MODULE
(8W-45-5)
8 JB
8 C1
9 C1
3 C9
L7 20 BK/YL
L7 20 BK/BR
Z313 14 BK
L101 18 RD
E
F
G
TO RIGHT LAVALIER MODULE
(8W-50-15)
TO LEFT LAVALIER MODULE
(8W-50-15)
G301
(8W-15-14)
(8W-15-15)
(8W-15-23)
TO C100
(8W-50-15)


BATT A0
(8W-10-7)
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE 4 40A
(8W-10-11)
20
A3 12 RD/WT
3 C3
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
1
3
HEADLAMP DELAY RELAY
(8W-12-16)
2
5
22
FUSE 12 10A
(8W-12-16)
21
24
FUSE 13 20A
(8W-12-16)
23
5 JB
HEADLAMP DELAY RELAY CONTROL
4 JB
HEADLAMP DELAY RELAY OUTPUT
BODY CONTROL MODULE
(8W-45-4)
12 C1
2 C6
5 C2
4 C6
L43 18 VT
L4 16 VT/WT
L4 16 VT/WT
L44 20 VT/RD
A3 16 RD/WT
A3 16 RD/WT
H
J
TO LEFT LAVALIER MODULE
(8W-50-15)
TO RIGHT LAVALIER MODULE
(8W-50-15)
1 C2
2 C2
4 C2
5 C2
HEADLAMP SWITCH
MULTI-FUNCTION SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP
4 LOW BEAM
5 HIGH BEAM
HEADLAMP BEAM SELECT SWITCH
3 C2

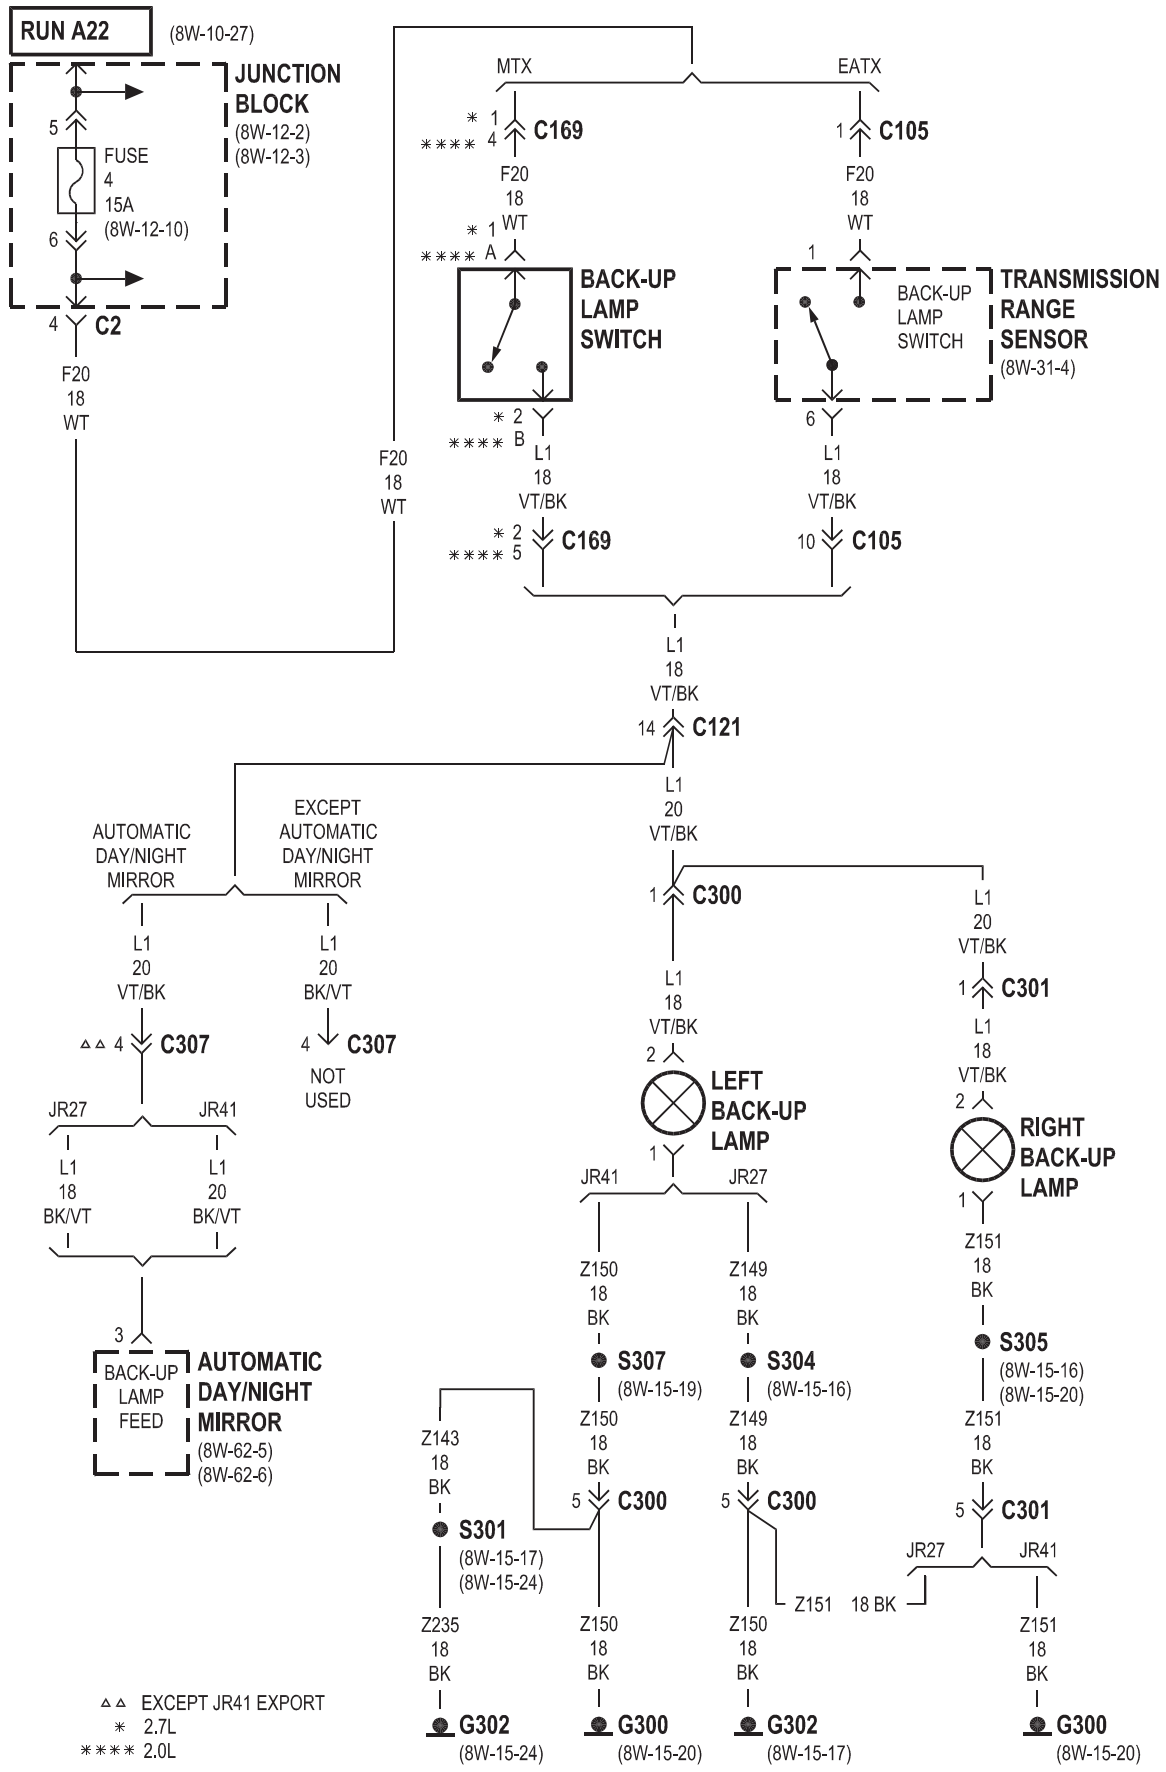

BATT A3
(8W-10-11)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
4 C6
A3
16
RD/WT
4 C2
A3
16
RD/WT
5 C2
MULTI-FUNCTION SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP
4 LOW BEAM
5 HIGH BEAM
HEADLAMP SWITCH
HEADLAMP BEAM SELECT SWITCH
3 C2
1 C2
2 C2
L3
14
RD/OR
3 C6
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
FUSE
2
10A
(8W-12-9)
FUSE
3
10A
(8W-12-9)
1 JB
DIMMER SWITCH HIGH BEAM OUTPUT
BODY CONTROL MODULE
(8W-45-3)
3 C1
6 C1
L34
18
RD/OR
L33
20
LG/BR
K
L
TO
RIGHT LAVALIER MODULE
(8W-50-15)
TO
LEFT LAVALIER MODULE
(8W-50-15)


FROM JUNCTION BLOCK (8W-50-14)
L
L33
20
LG/BR
FROM JUNCTION BLOCK (8W-50-13)
H
L43
18
VT
FROM JUNCTION BLOCK (8W-50-12)
F
L7
20
BK/BR
FROM JUNCTION BLOCK (8W-50-12)
G
L101
18
RD
9 C100
L101
18
RD
FROM JUNCTION BLOCK (8W-50-12)
E
L7
20
BK/YL
FROM JUNCTION BLOCK (8W-50-13)
J
L44
20
VT/RD
FROM JUNCTION BLOCK (8W-50-14)
K
L34
18
RD/OR
RIGHT LAVALIER MODULE
2
5
4
6
3
M LEVELING MOTOR
PARK/TURN SIGNAL LAMP
HEADLAMP
LAMP REPEATER SIDE
1
LEFT LAVALIER MODULE
3
6
4
5
2
M LEVELING MOTOR
PARK/TURN SIGNAL LAMP
HEADLAMP
LAMP REPEATER SIDE
1
Z163
16
BK
G108
(8W-15-6)
Z162
16
BK
G106
(8W-15-5)

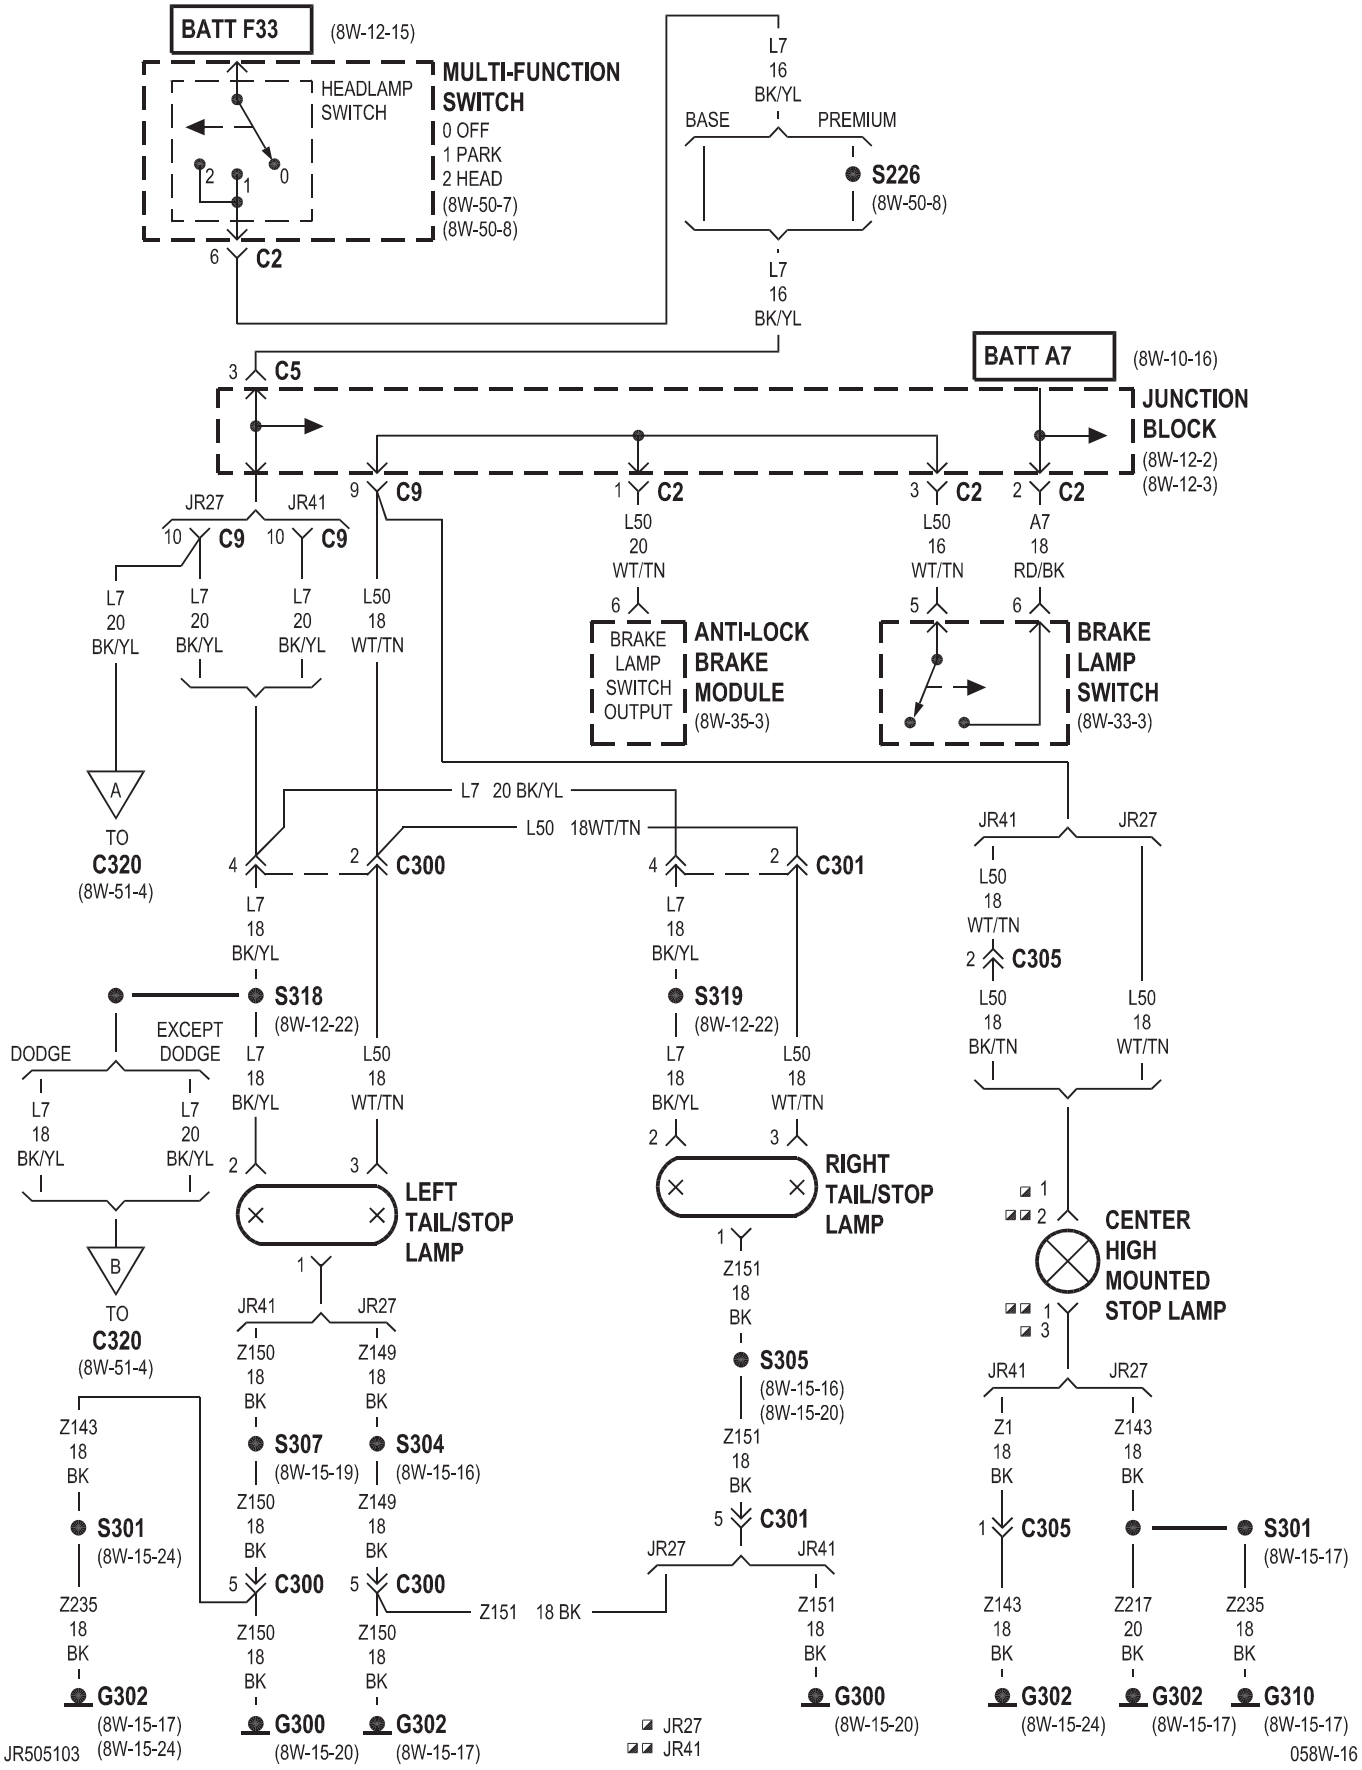

BATT A3
(8W-10-11)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
18
FUSE
10
20A
(8W-12-17)
17
2
C11
L25
20
BR
11
C2
MULTI-FUNCTION SWITCH
0 OFF
1 ON
(8W-51-11)
FRONT FOG LAMP SWITCH
1
0
12
C2
L39
20
LB/WT
5
C5
INSTRUMENT CLUSTER
(8W-40-7)
FOG LAMP SWITCH OUTPUT
26
L39
18
LB
10
C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
10
C1
11
C1
L39
20
LB/OR
L39
20
LB
A
LEFT FOG LAMP
B
A
RIGHT FOG LAMP
B
Z145
20
BK
Z144
20
BK
G108
(8W-15-6)
G106
(8W-15-5)

8W-51 REAR LIGHTING

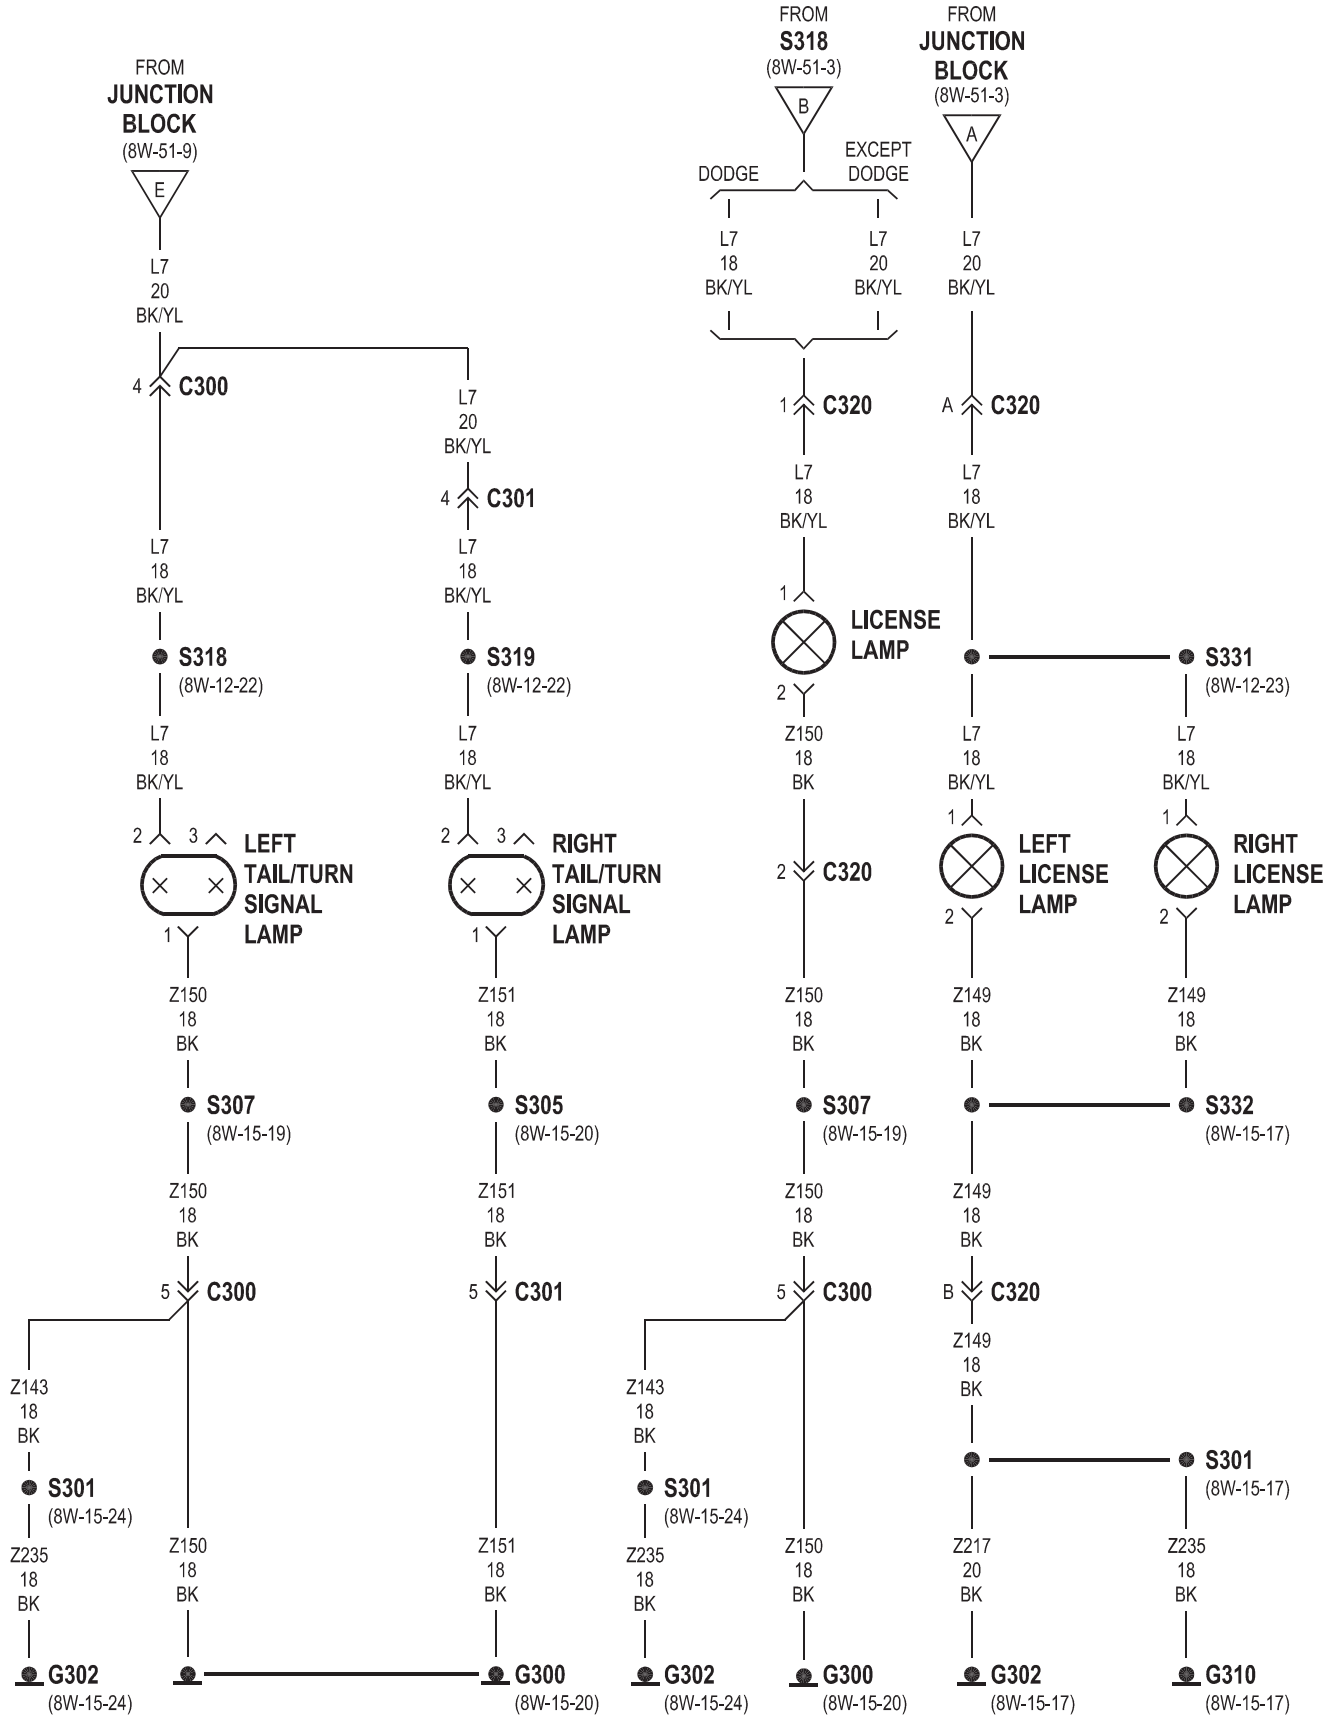
Component	Page
Anti-Lock Brake Module	8W-51-3
Automatic Day/Night Mirror	8W-51-2
Back-Up Lamp Switch	8W-51-2
Brake Lamp Switch	8W-51-3
Center High Mounted Stop Lamp	8W-51-3
Fuse 4	8W-51-2
Fuse 10	8W-51-5, 11
Fuse 11	8W-51-5
G103	8W-51-5
G300	8W-51-2, 3, 4, 10, 11
G302	8W-51-2, 3, 4, 6, 8, 10, 11
G310	8W-51-3, 4, 8
Instrument Cluster	8W-51-5, 11
Junction Block	8W-51-2, 3, 4, 5, 7, 8, 9, 10, 11
Left Back-Up Lamp	8W-51-2
Left License Lamp	8W-51-4, 8, 10
Left Rear Fog Lamp	8W-51-6, 11
Left Tail/Side Marker Lamp	8W-51-8, 10
Left Tail/Stop Lamp	8W-51-3
Left Tail/Turn Signal Lamp	8W-51-4
License Lamp	8W-51-4
Multi-Function Switch	8W-51-3, 5, 7, 9, 11
Power Distribution Center	8W-51-5
Rear Fog Lamp Relay	8W-51-5, 6
Right Back-Up Lamp	8W-51-2
Right License Lamp	8W-51-4, 8, 10
Right Rear Fog Lamp	8W-51-6, 11
Right Tail/Side Marker Lamp	8W-51-8, 10
Right Tail/Stop Lamp	8W-51-3
Right Tail/Turn Signal Lamp	8W-51-4
Transmission Range Sensor	8W-51-2

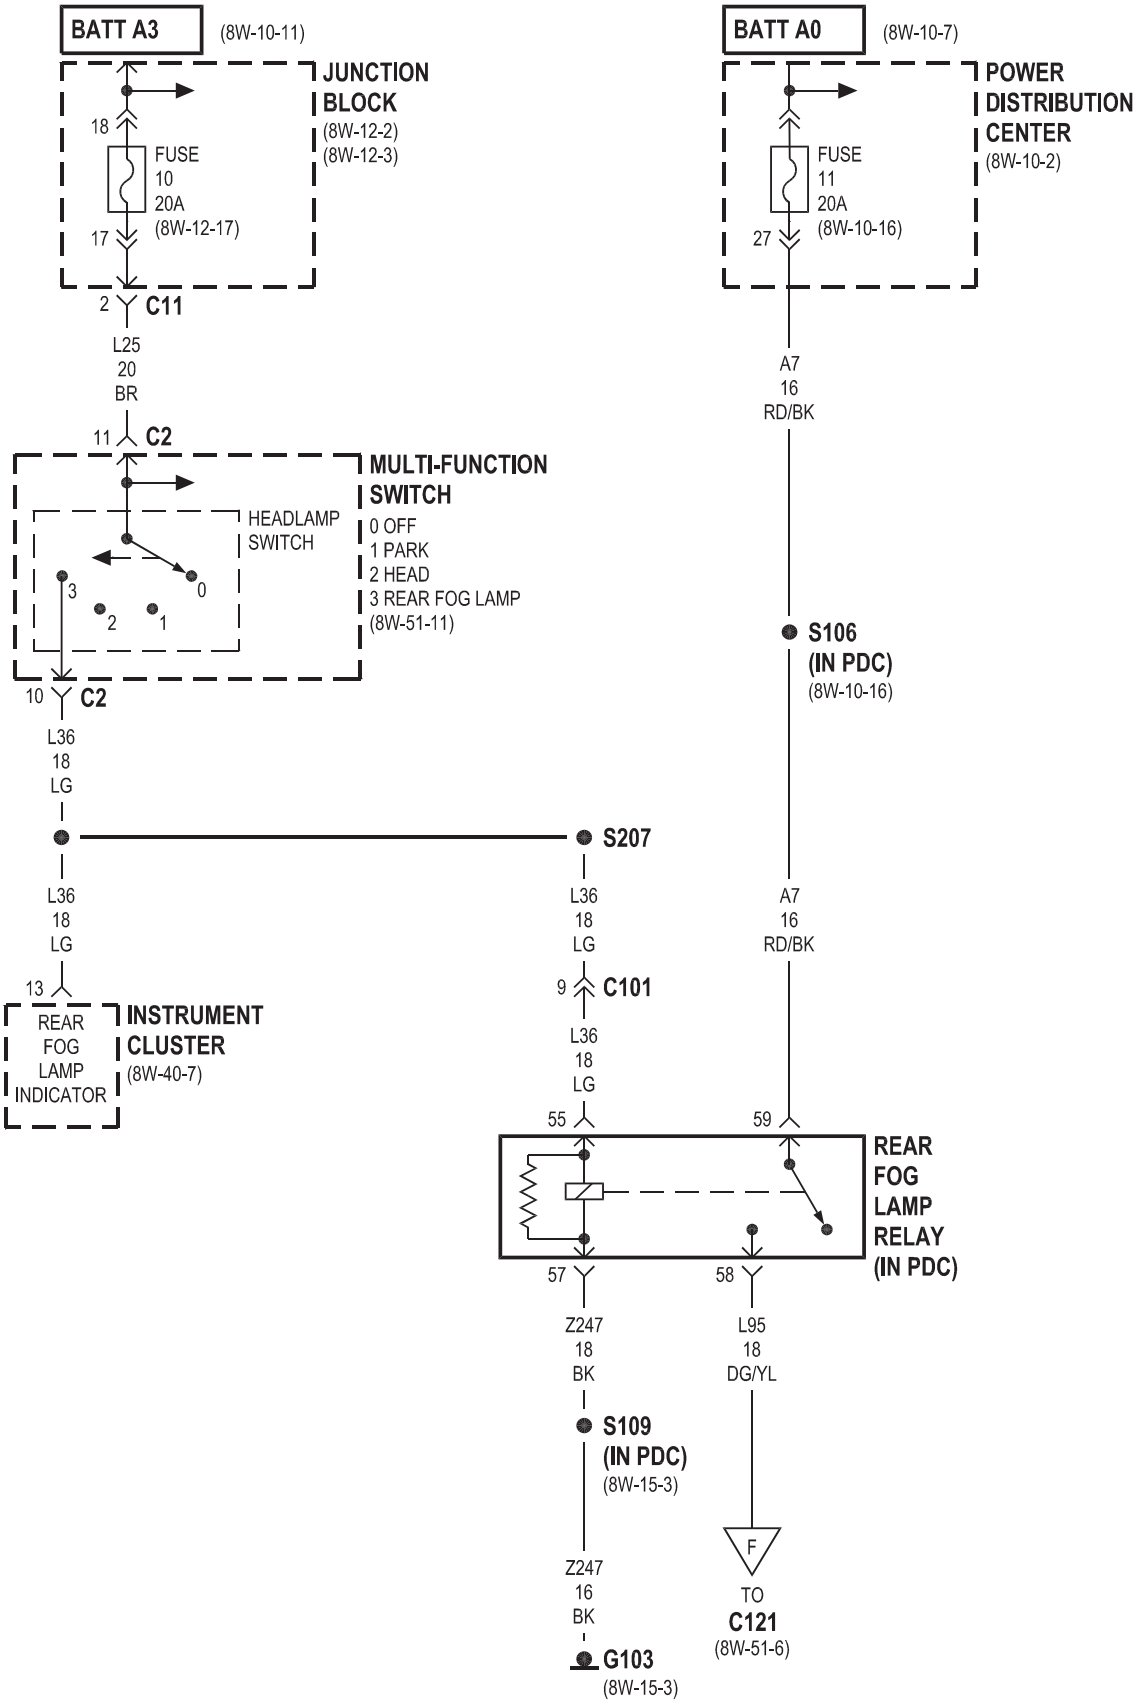

RUN A22
(8W-10-27)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
5
FUSE 4 15A
(8W-12-10)
6
4 C2
F20 18 WT
MTX
EATX
* 1 **** 4 C169
1 C105
F20 18 WT
* 1 **** A
1
BACK-UP LAMP SWITCH
BACK-UP LAMP SWITCH
TRANSMISSION RANGE SENSOR
(8W-31-4)
* 2 **** B
6
L1 18 VT/BK
* 2 **** 5 C169
10 C105
F20 18 WT
L1 18 VT/BK
14 C121
L1 20 VT/BK
AUTOMATIC DAY/NIGHT MIRROR
EXCEPT AUTOMATIC DAY/NIGHT MIRROR
L1 20 VT/BK
L1 20 BK/VT
△△ 4 C307
4 C307
NOT USED
JR27
JR41
L1 18 BK/VT
L1 20 BK/VT
3
BACK-UP LAMP FEED
AUTOMATIC DAY/NIGHT MIRROR
(8W-62-5)
(8W-62-6)
1 C300
L1 18 VT/BK
2
LEFT BACK-UP LAMP
1
JR41
JR27
Z150 18 BK
Z149 18 BK
S307
(8W-15-19)
S304
(8W-15-16)
Z143 18 BK
S301
(8W-15-17)
(8W-15-24)
Z150 18 BK
5 C300
Z149 18 BK
5 C300
Z235 18 BK
Z150 18 BK
Z150 18 BK
Z151
18 BK
G302
(8W-15-24)
G300
(8W-15-20)
G302
(8W-15-17)
L1 20 VT/BK
1 C301
L1 18 VT/BK
2
RIGHT BACK-UP LAMP
1
Z151 18 BK
S305
(8W-15-16)
(8W-15-20)
Z151 18 BK
5 C301
JR27
JR41
Z151 18 BK
G300
(8W-15-20)
△△ EXCEPT JR41 EXPORT
* 2.7L
**** 2.0L

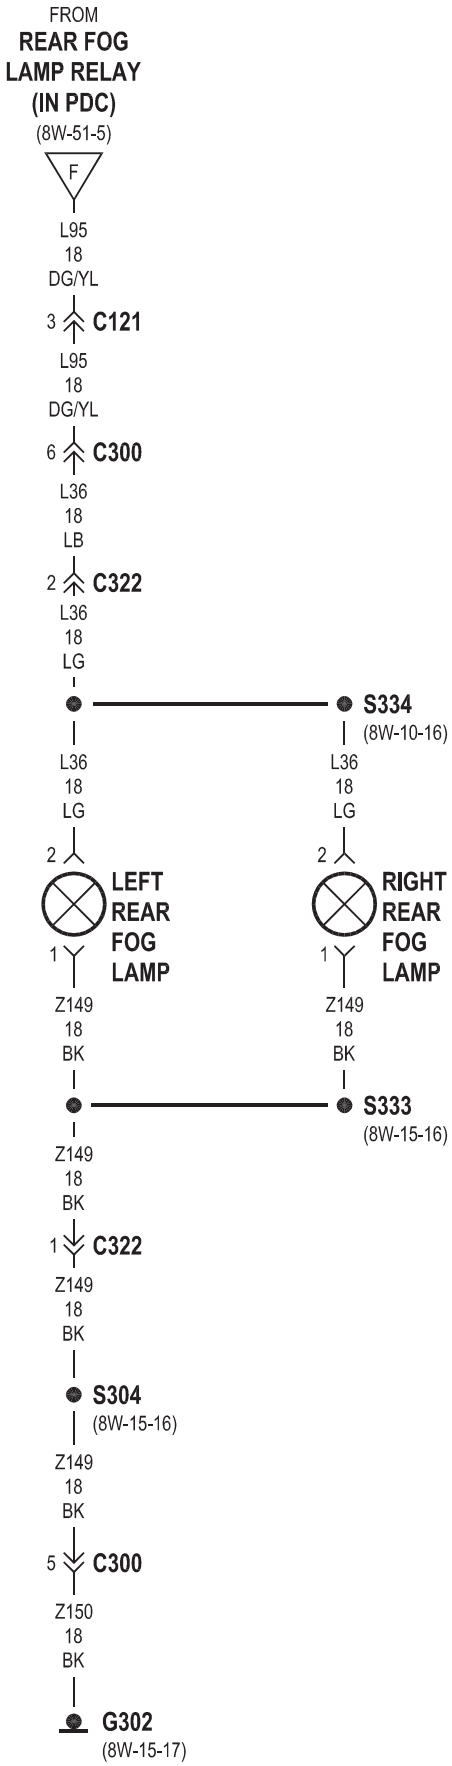
EXCEPT EXPORT

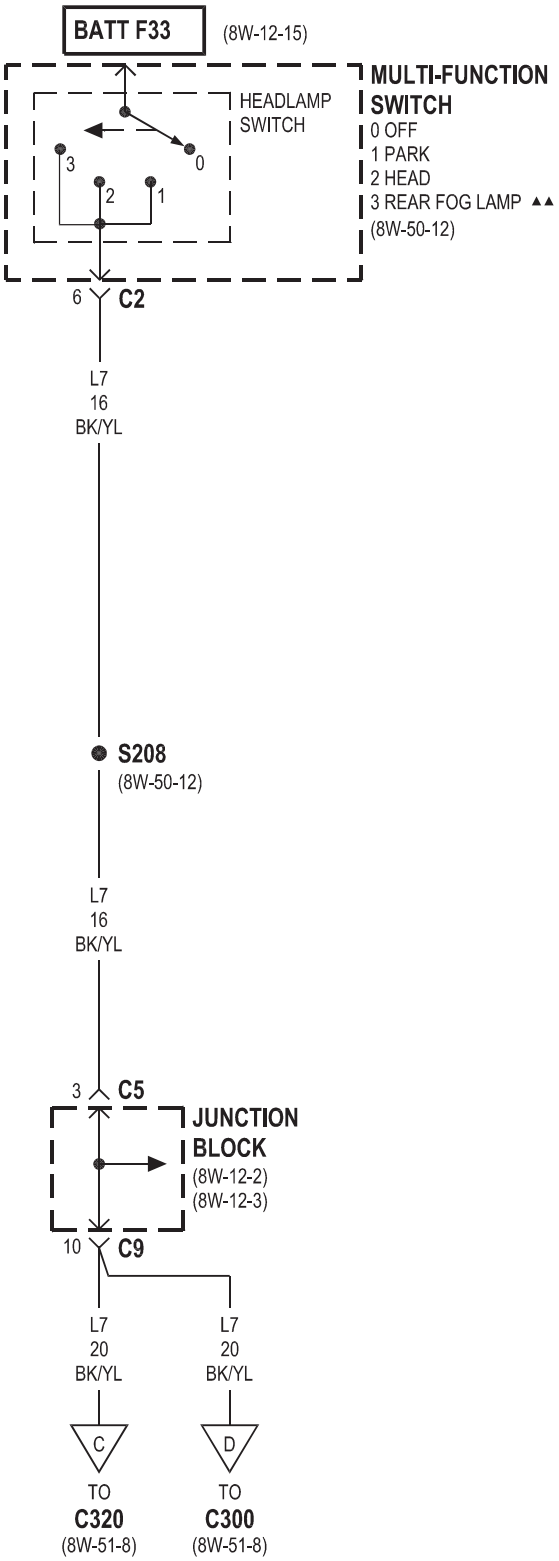


EXCEPT EXPORT

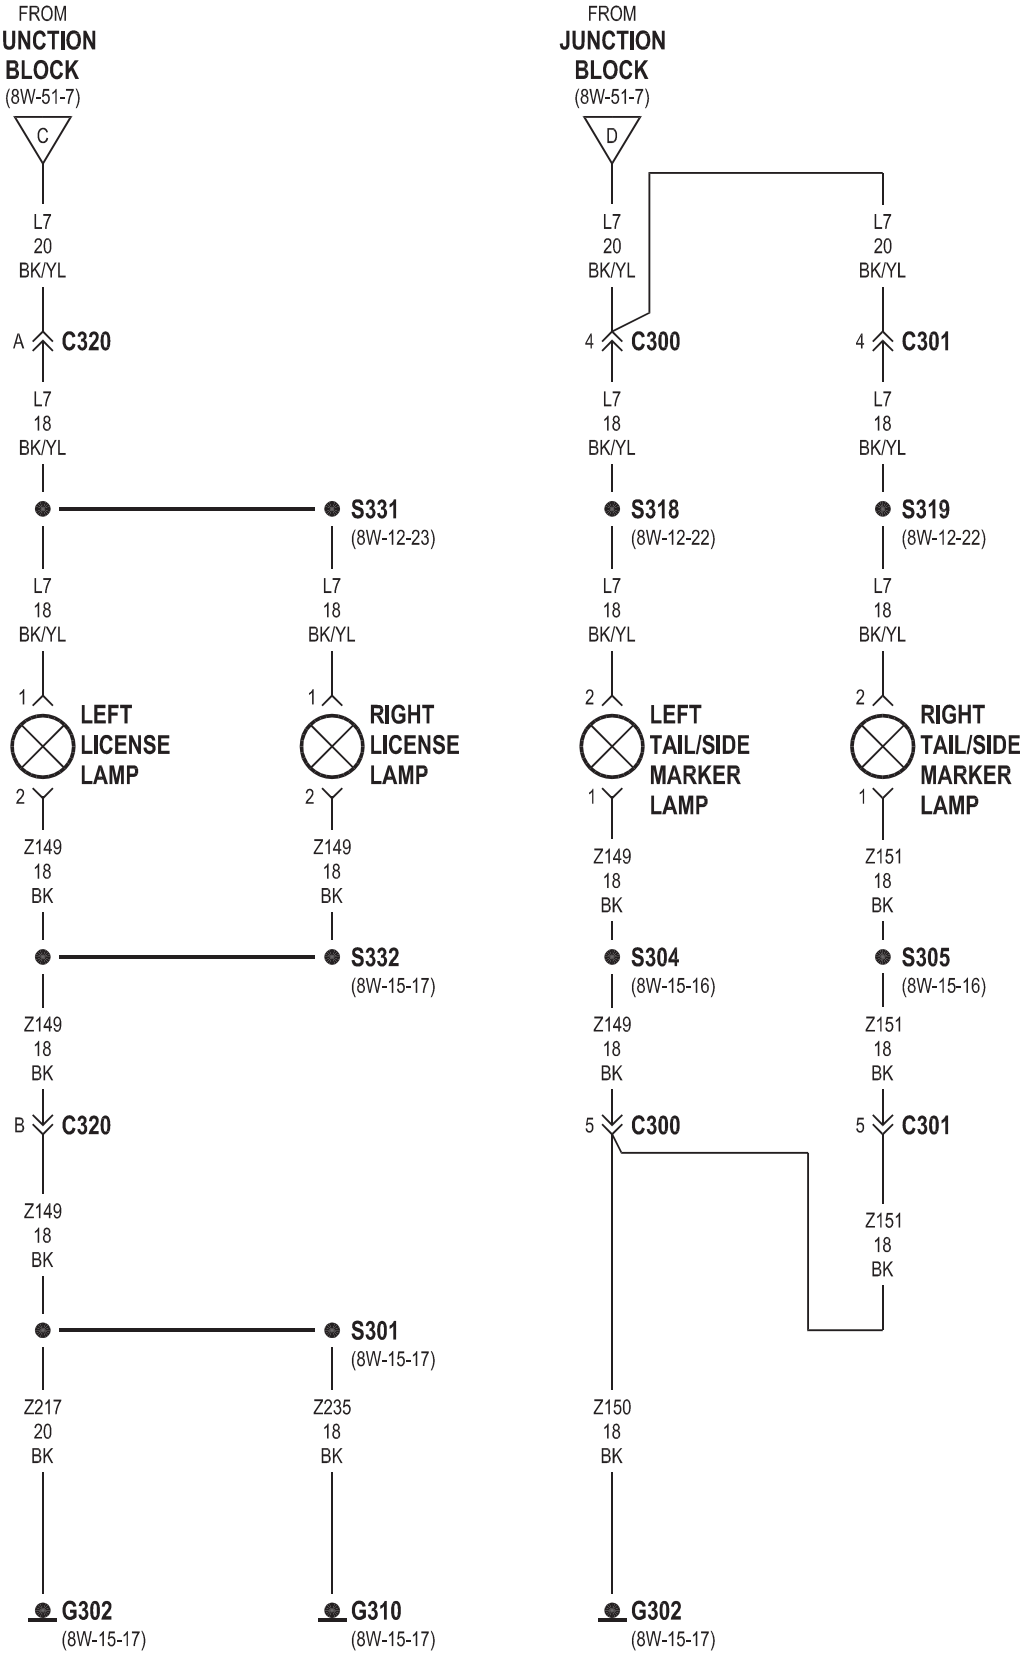


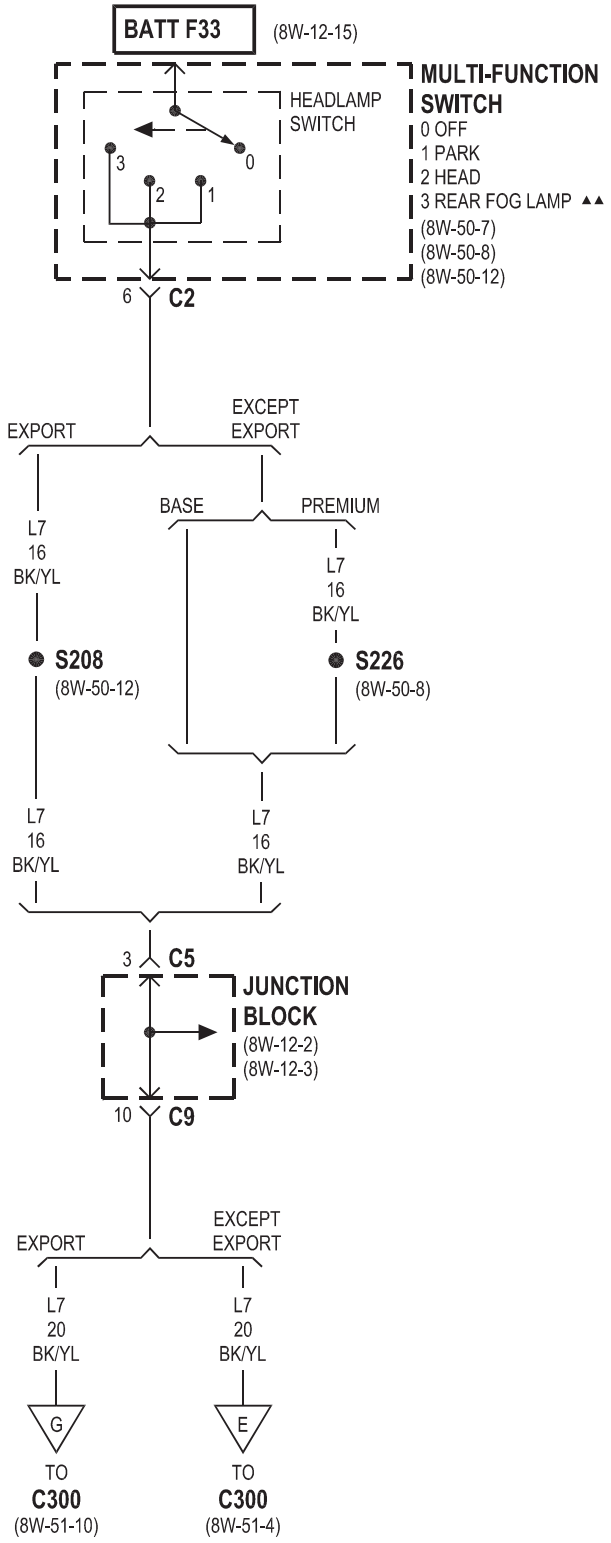

BATT A3
(8W-10-11)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
18
FUSE 10 20A
(8W-12-17)
17
2
C11
L25 20 BR
11
C2
MULTI-FUNCTION SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP
(8W-51-11)
HEADLAMP SWITCH
3
0
2
1
10
C2
L36 18 LG
S207
L36 18 LG
13
REAR FOG LAMP INDICATOR
INSTRUMENT CLUSTER
(8W-40-7)
L36 18 LG
9
C101
L36 18 LG
55
57
Z247 18 BK
S109
(IN PDC)
(8W-15-3)
Z247 16 BK
G103
(8W-15-3)
BATT A0
(8W-10-7)
POWER DISTRIBUTION CENTER
(8W-10-2)
FUSE 11 20A
(8W-10-16)
27
A7 16 RD/BK
S106
(IN PDC)
(8W-10-16)
A7 16 RD/BK
59
58
REAR FOG LAMP RELAY
(IN PDC)
L95 18 DG/YL
F
TO
C121
(8W-51-6)


FROM
REAR FOG LAMP RELAY (IN PDC)
(8W-51-5)
F
L95
18
DG/YL
3 C121
L95
18
DG/YL
6 C300
L36
18
LB
2 C322
L36
18
LG
S334
(8W-10-16)
L36
18
LG
2
LEFT REAR FOG LAMP
1
Z149
18
BK
2
RIGHT REAR FOG LAMP
1
Z149
18
BK
S333
(8W-15-16)
Z149
18
BK
1 C322
Z149
18
BK
S304
(8W-15-16)
Z149
18
BK
5 C300
Z150
18
BK
G302
(8W-15-17)

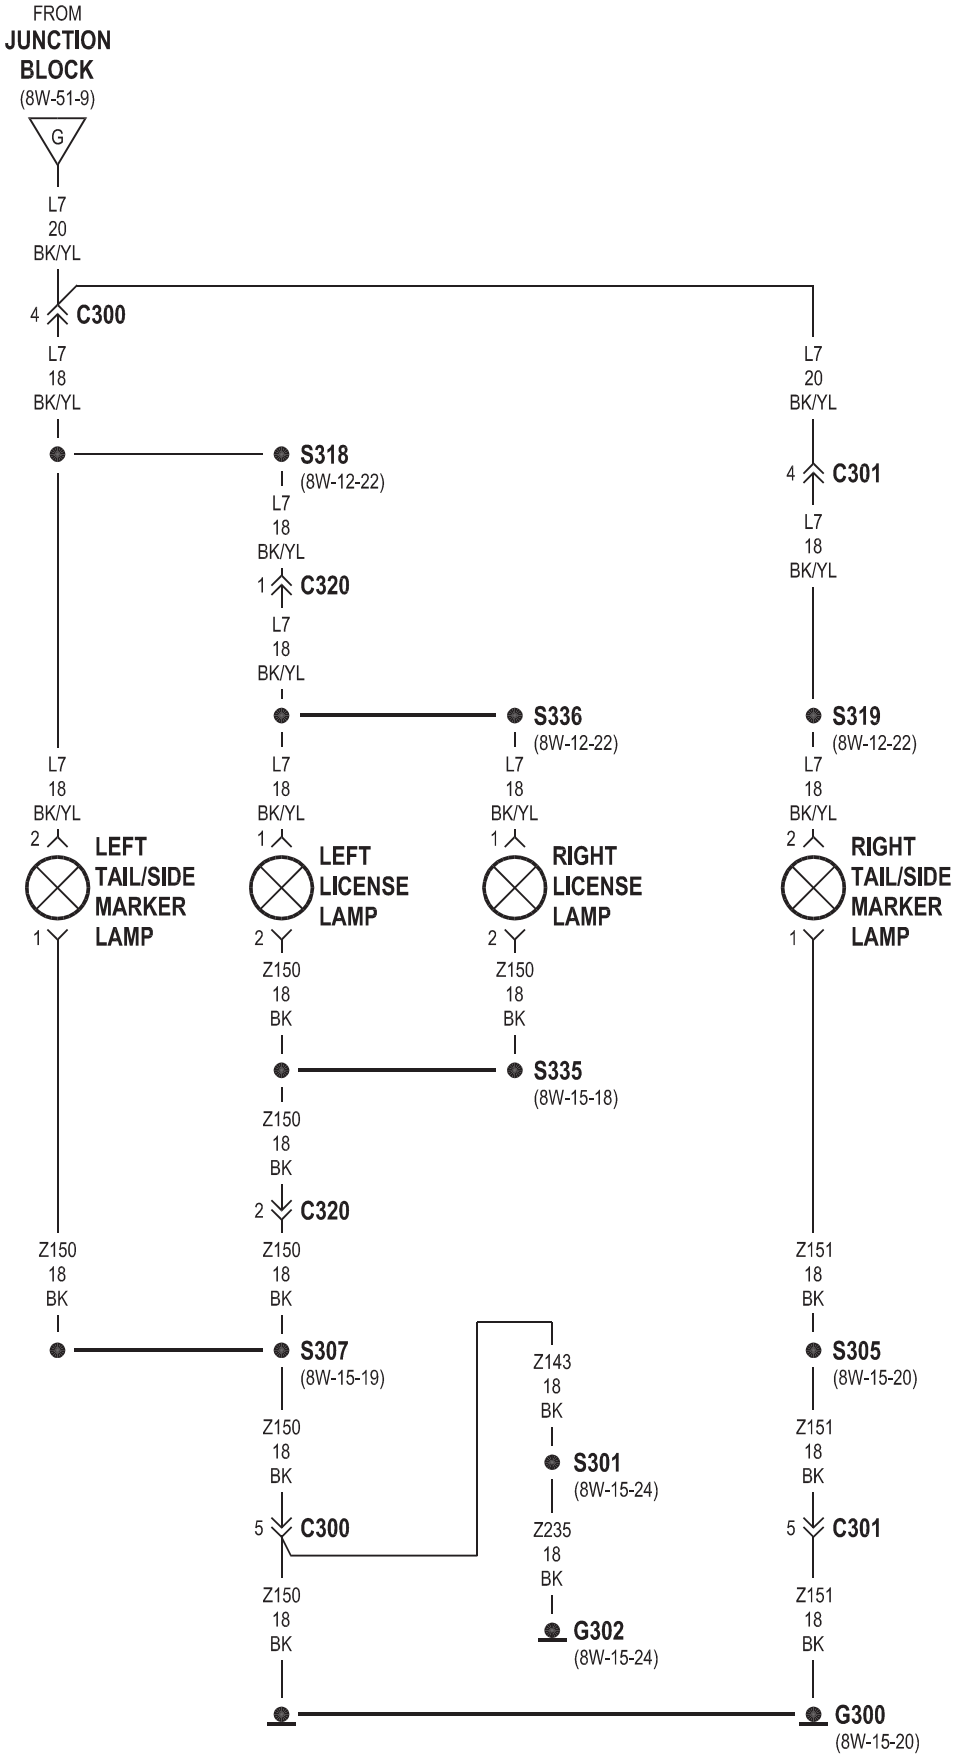

BATT F33
(8W-12-15)
MULTI-FUNCTION SWITCH
HEADLAMP SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP ▲▲
(8W-50-12)
3
0
2
1
6
C2
L7
16
BK/YL
S208
(8W-50-12)
L7
16
BK/YL
3
C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
10
C9
L7
20
BK/YL
L7
20
BK/YL
C
D
TO
C320
(8W-51-8)
TO
C300
(8W-51-8)

▲▲ EXPORT

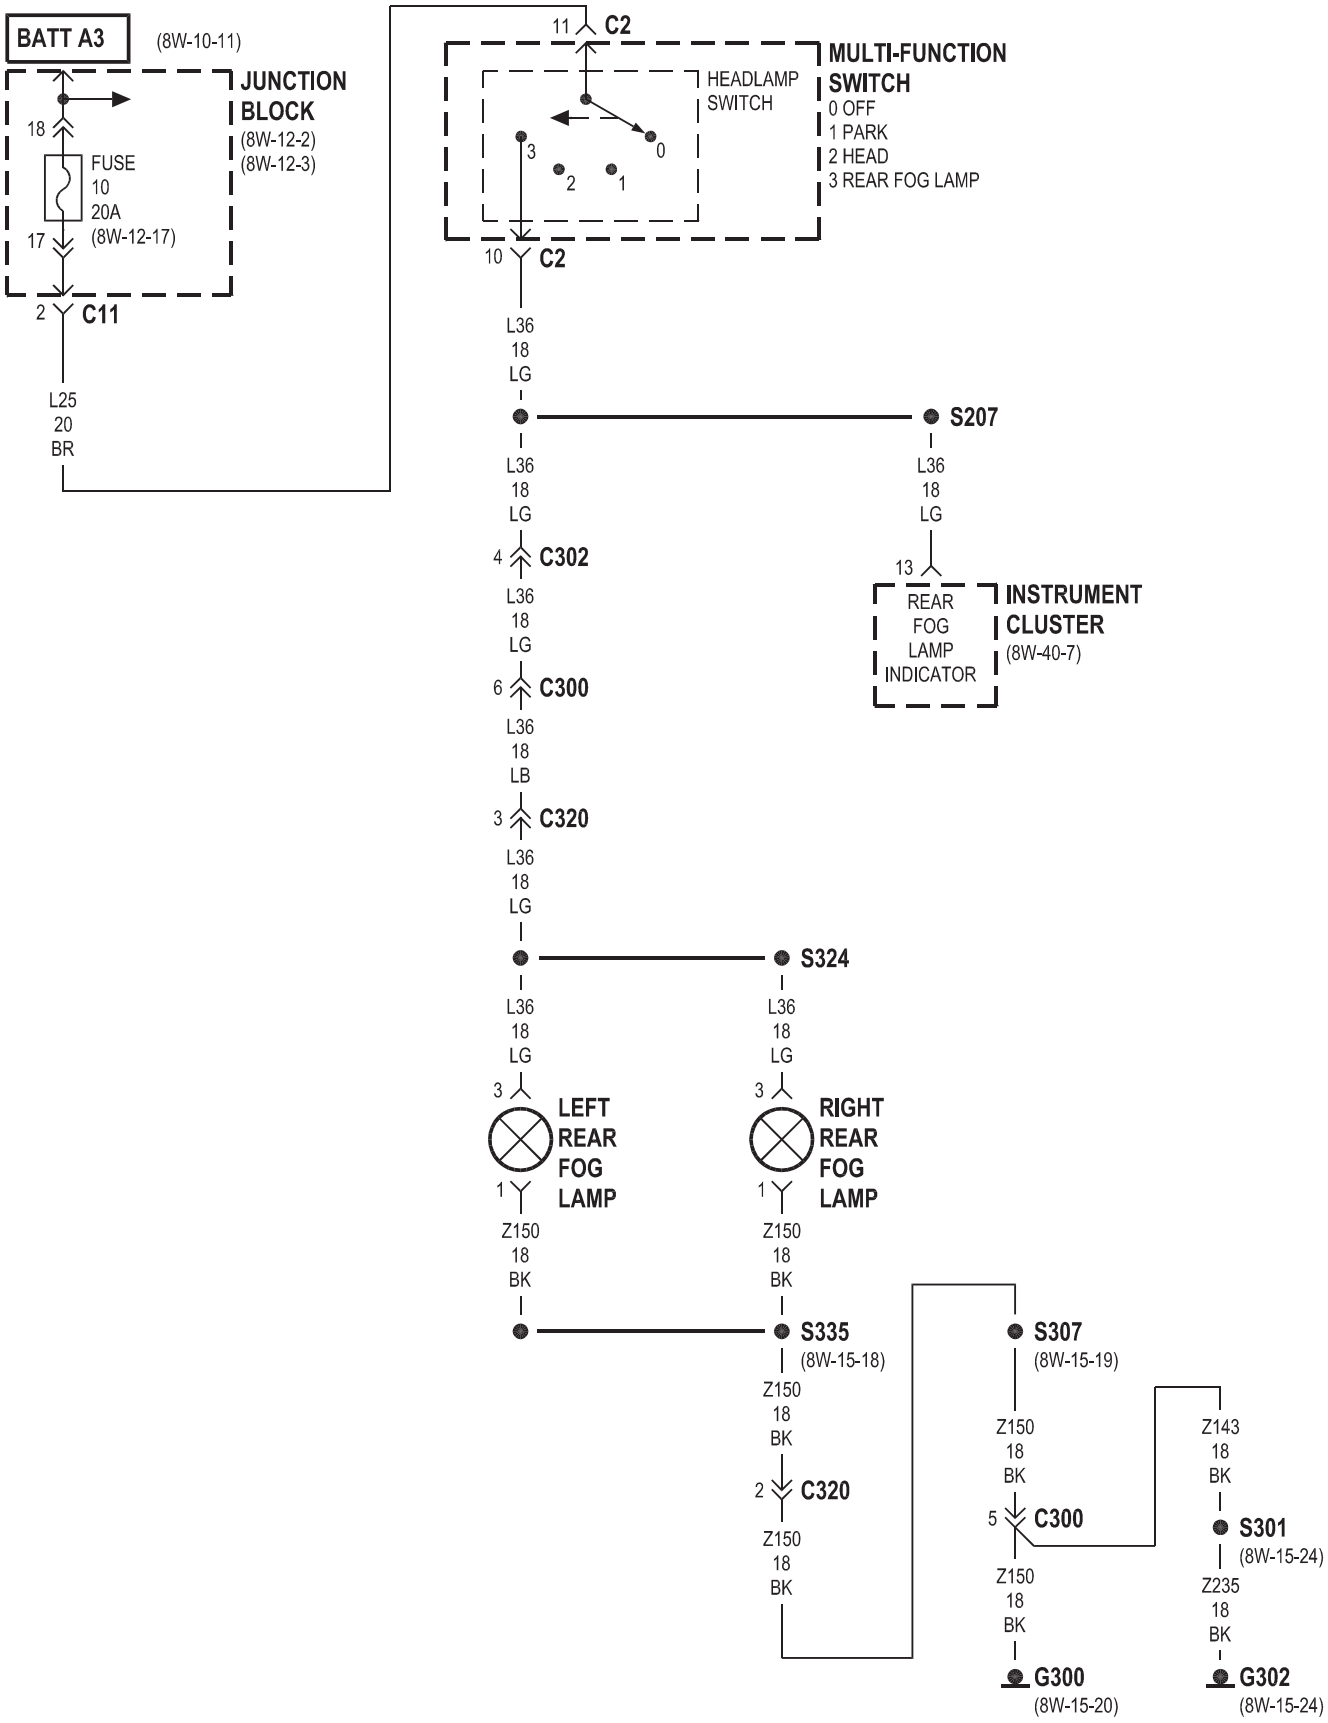

FROM
JUNCTION
BLOCK
(8W-51-7)
C
L7
20
BK/YL
A
C320
L7
18
BK/YL
S331
(8W-12-23)
L7
18
BK/YL
1
LEFT
LICENSE
LAMP
2
Z149
18
BK
S332
(8W-15-17)
Z149
18
BK
B
C320
Z149
18
BK
S301
(8W-15-17)
Z217
20
BK
G302
(8W-15-17)
L7
18
BK/YL
1
RIGHT
LICENSE
LAMP
2
Z149
18
BK
Z235
18
BK
G310
(8W-15-17)
FROM
JUNCTION
BLOCK
(8W-51-7)
D
L7
20
BK/YL
4
C300
L7
18
BK/YL
S318
(8W-12-22)
L7
18
BK/YL
2
LEFT
TAIL/SIDE
MARKER
LAMP
1
Z149
18
BK
S304
(8W-15-16)
Z149
18
BK
5
C300
Z150
18
BK
G302
(8W-15-17)
L7
20
BK/YL
4
C301
L7
18
BK/YL
S319
(8W-12-22)
L7
18
BK/YL
2
RIGHT
TAIL/SIDE
MARKER
LAMP
1
Z151
18
BK
S305
(8W-15-16)
Z151
18
BK
5
C301
Z151
18
BK


BATT F33
(8W-12-15)
MULTI-FUNCTION SWITCH
HEADLAMP SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP ▲▲
(8W-50-7)
(8W-50-8)
(8W-50-12)
3
0
2
1
6
C2
EXPORT
EXCEPT EXPORT
BASE
PREMIUM
L7
16
BK/YL
S208
(8W-50-12)
S226
(8W-50-8)
3
C5
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
10
C9
L7
20
BK/YL
G
E
TO
C300
(8W-51-10)
(8W-51-4)

▲▲ EXPORT


FROM
JUNCTION
BLOCK
(8W-51-9)
G
L7
20
BK/YL
4 C300
L7
18
BK/YL
S318
(8W-12-22)
L7
18
BK/YL
1 C320
L7
18
BK/YL
S336
(8W-12-22)
L7
20
BK/YL
4 C301
L7
18
BK/YL
S319
(8W-12-22)
L7
18
BK/YL
2
LEFT
TAIL/SIDE
MARKER
LAMP
1
L7
18
BK/YL
1
LEFT
LICENSE
LAMP
2
L7
18
BK/YL
1
RIGHT
LICENSE
LAMP
2
L7
18
BK/YL
2
RIGHT
TAIL/SIDE
MARKER
LAMP
1
Z150
18
BK
2 C320
Z150
18
BK
S335
(8W-15-18)
Z150
18
BK
Z150
18
BK
Z151
18
BK
S307
(8W-15-19)
S305
(8W-15-20)
Z143
18
BK
S301
(8W-15-24)
Z150
18
BK
5 C300
Z235
18
BK
Z151
18
BK
5 C301
Z150
18
BK
G302
(8W-15-24)
Z151
18
BK
G300
(8W-15-20)

JR41 EXPORT


BATT A3
(8W-10-11)
JUNCTION BLOCK
(8W-12-2)
(8W-12-3)
18
FUSE 10 20A
(8W-12-17)
17
2 C11
L25 20 BR
11 C2
HEADLAMP SWITCH
3
0
2
1
MULTI-FUNCTION SWITCH
0 OFF
1 PARK
2 HEAD
3 REAR FOG LAMP
10 C2
L36 18 LG
S207
L36 18 LG
13
REAR FOG LAMP INDICATOR
INSTRUMENT CLUSTER
(8W-40-7)
4 C302
L36 18 LG
6 C300
L36 18 LB
3 C320
L36 18 LG
S324
L36 18 LG
3
LEFT REAR FOG LAMP
1
Z150 18 BK
L36 18 LG
3
RIGHT REAR FOG LAMP
1
Z150 18 BK
S335
(8W-15-18)
Z150 18 BK
2 C320
Z150 18 BK
S307
(8W-15-19)
Z150 18 BK
5 C300
Z150 18 BK
G300
(8W-15-20)
Z143 18 BK
S301
(8W-15-24)
Z235 18 BK
G302
(8W-15-24)