


PASSENGER POWER WINDOW SWITCH

PASSENGER POWER WINDOW SWITCH - BLUE 6 WAY


CAV	CIRCUIT	FUNCTION
1	Q22 16VT	PASSENGER WINDOW DRIVER (DOWN)
2	Q16 14BR/WT	MASTER WINDOW SWITCH (RIGHT FRONT UP)
3	-	-
4	Q26 14VT/WT	MASTER WINDOW SWITCH (RIGHT FRONT DOWN)
5	Q12 16BR	PASSENGER WINDOW DRIVER (UP)
6	Q1 14YL	POWER WINDOW SWITCH FEED

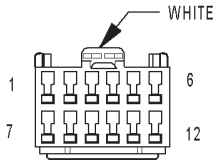

POWER AMPLIFIER C1

POWER AMPLIFIER C1 - WHITE 12 WAY

CAV	CIRCUIT	FUNCTION
1	X87 18LG/VT	AMPLIFIED LEFT DOOR SPEAKER (+)
2	X82 18LB/RD	AMPLIFIED RIGHT DOOR SPEAKER (+)
3	X83 18YL/RD	AMPLIFIED LEFT DOOR SAIL SPEAKER (+)
4	X86 18OR/RD	AMPLIFIED RIGHT DOOR SAIL SPEAKER (+)
5	X95 18WT/VT (PREMIUM II AUDIO)	AMPLIFIED LOW LEFT REAR SPEAKER (+)
6	X98 18TN/VT (PREMIUM II AUDIO)	AMPLIFIED LOW RIGHT REAR SPEAKER (+)
7	X85 18LG/BK	AMPLIFIED LEFT DOOR SPEAKER (-)
8	X80 18LB/BK	AMPLIFIED RIGHT DOOR SPEAKER (-)
9	X81 18YL/BK	AMPLIFIED LEFT DOOR SAIL SPEAKER (-)
10	X84 18OR/BK	AMPLIFIED RIGHT DOOR SAIL SPEAKER (-)
11	X97 18WT/DG (PREMIUM II AUDIO)	AMPLIFIED LOW LEFT REAR SPEAKER (-)
12	X96 18TN/DG (PREMIUM II AUDIO)	AMPLIFIED LOW RIGHT REAR SPEAKER (-)

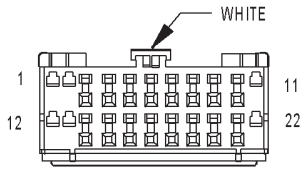

POWER AMPLIFIER C2

POWER AMPLIFIER C2 - WHITE 22 WAY

CAV	CIRCUIT	FUNCTION
1	F62 16RD/WT	FUSED B(+)
2	Z2 16BK/LG	GROUND
3	X60 20DG/RD	RADIO 12V OUTPUT
4	X54 18VT	RIGHT FRONT SPEAKER (+)
5	X53 18DG	LEFT FRONT SPEAKER (+)
6	X52 18DB/WT	RIGHT REAR SPEAKER (+)
7	X51 18BR/YL	LEFT REAR SPEAKER (+)
8	-	-
9	X88 18PK/RD	AMPLIFIED CENTER INSTRUMENT PANEL SPEAKER (+)
10	X93 18WT/RD	AMPLIFIED HIGH LEFT REAR SPEAKER (+)
11	X94 18TN/RD	AMPLIFIED HIGH RIGHT REAR SPEAKER (+)
12	F62 16RD	FUSED B(+)
13	Z2 16BK/LG	GROUND
14	-	-
15	X56 18DB/RD	RIGHT FRONT SPEAKER (-)
16	X55 18BR/RD	LEFT FRONT SPEAKER (-)
17	X58 18DB/OR	RIGHT REAR SPEAKER (-)
18	X57 18BR/LB	LEFT REAR SPEAKER (-)
19	-	-
20	X89 18PK/BK	AMPLIFIED CENTER INSTRUMENT PANEL SPEAKER (-)
21	X91 18WT/BK	AMPLIFIED HIGH LEFT REAR SPEAKER (-)
22	X92 18TN/BK	AMPLIFIED HIGH RIGHT REAR SPEAKER (-)